
# © Electrolux ICON Dishwasher

## Installation Time Savers

PREPARATION UNIT

### Adjust the leveling legs

- · Before installation, place blanket on floor and roll dishwasher onto its back
- Measure the height from the floor to the underside of the counter
- Dishwasher is 32 1/4" high without leveling legs
- Adjust leveling legs so dishwasher is slightly lower than countertop and level with floor
- Once the unit is in place, the rear legs can be adjusted with an Electrolux leg adjustment tool

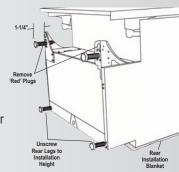

# step

### Connect the braided hose

**NOTE:** Use of rigid, copper tubing will make it more difficult to install and position the dishwasher in the cabinet.


• Use flexible braided hose to connect water supply to dishwasher (Electrolux service part number 5304416563) (60" length for most installations)



### INSTALLATION

### Make the electrical connections


- Install UL listed strain relief clamp at junction box
- Feed house wiring through back of junction box
- Connect like color wires to like color terminals

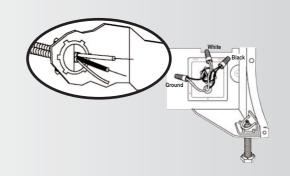



### Secure the dishwasher

- Front face of door should be aligned with cabinet door surface
- · Make sure dishwasher is centered in cabinet opening
- For additional stability, use side mounts in addition to top mounting locations -Use magnetic screwdriver to hold screw while feeding it through side trim
- · With door open, adjust trim by loosening and extending to cabinet edge
- If installed correctly, door and switch will be underneath countertop lip

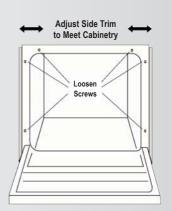

Finally, to complete the Electrolux experience, fill the dishwasher rinse aid reservoir and recommend its use to the consumer!