


SAMSUNG

SAMSUNG Home Appliance Service

***SERVICE* GUIDE**

Bottom-Mounted Freezer

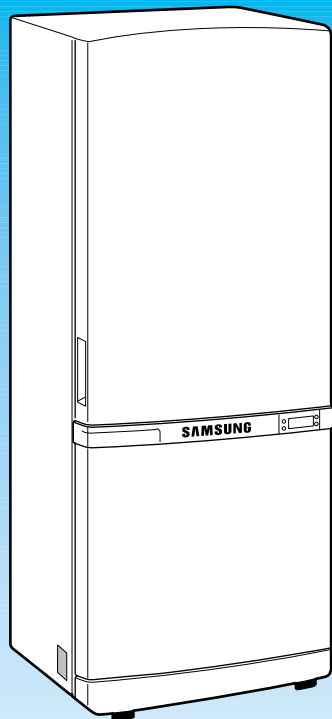

Model:

**RB1955SW
RB1955SH
RB1955VQ
RB2155SW
RB2155SH
RB2155BB**



WARNING

IMPORTANT SAFETY NOTICE

The service guide is for service men with adequate backgrounds of electrical, electronic, and mechanical experience. Any attempt to repair a major appliance may result in personal injury and property damage. The manufacturer or dealer cannot be responsible for the interpretation of this information.

SAMSUNG ELECTRONICS AMERICA, INC.

Technical Service Guide

Copyright ©2004

All rights reserved. This service guide may not be reproduced in whole or in part in any form without written permission from the SAMSUNG ELECTRONICS Company.

Contents

| | |
|---|----|
| 1. Installation | 4 |
| 2. Nomenclature | 4 |
| 3. Product Specifications | 5 |
| 4. Electrical part specifications & standard | 5 |
| 5. Warranty information | 7 |
| 6. Interior Views and Dimensions | 8 |
| 7. Refrigeration Cycle and Cool Air Circulation Route | 10 |
| 8. Mechanical Disassembly | 12 |
| 9. Operation Function | 19 |
| 10. Circuit Descriptions | 26 |
| 11. Diagnostics | 34 |
| 12. Illustrated Parts Catalog | 48 |
| 13. Safety instruction on services | 56 |
| • Appendix I (Reference for circuit diagnostics) | 57 |
| • Appendix II (Circuit diagram) | 61 |


1. INSTALLATION



- 1) **To protect refrigerator in movement**
Use padded hand truck from side only.
- 2) **Remove all protective tape and pad from the refrigerators.**
Connect power cord. Adjust the clearance between the doors.
- 3) **Temperature controls are preset in the factory for recommended settings.**
The refrigerator should run smoothly and lower the temperature gradually.
- 4) **Once the refrigerator temperature is sufficiently low**
It is recommended to store foods in the refrigerator.
It takes a few hours to reach the preset temperatures.

2. NOMENCLATURE

2004 Models

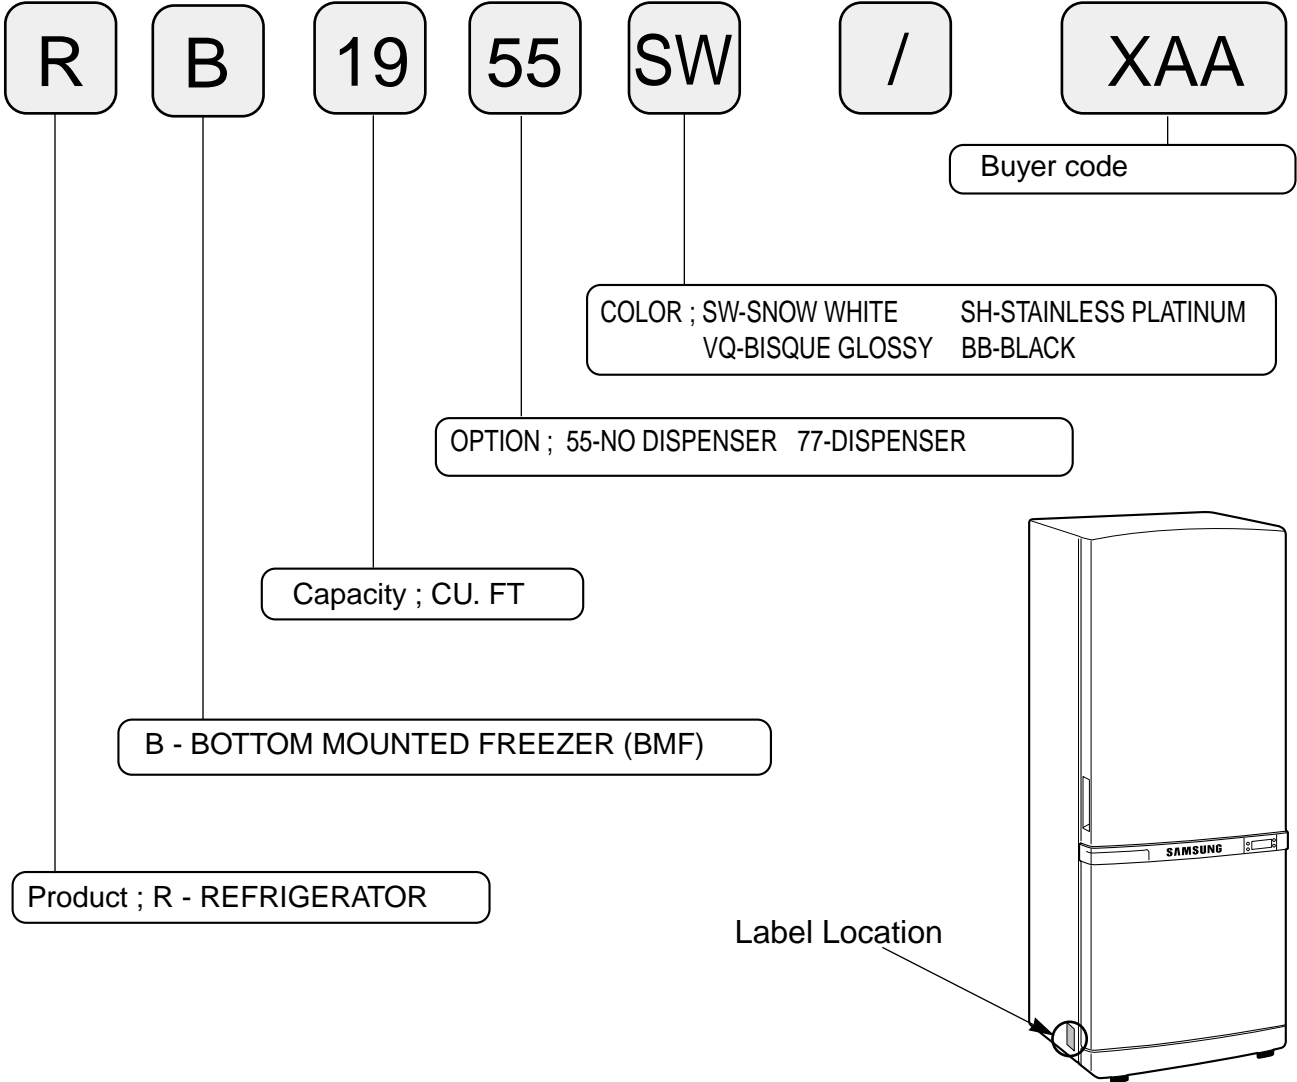

3. PRODUCT SPECIFICATIONS

| Model | | RB1955SW/SH/VQ | RB2155SW/SH/BB |
|------------------------------------|--------------------|--------------------|--------------------|
| Type | | BMF 2 Door | |
| Temperature control | | Electronic control | |
| Net Capacity (ft ³) | Total | 18.7 | 20.4 |
| | Freezer | 5.9 | 6.5 |
| | Refrigerator | 12.8 | 13.9 |
| Net dimension (W x D x H) | | 32.3 x 28.3 x 69.9 | 32.3 x 30.3 x 69.9 |
| Foam | Cabinet insulation | CYCLO-PENTANE | |
| | Door insulation | CYCLO-PENTANE | |
| Liner | Cabinet | A.B.S | |
| | Door | A.B.S | |
| Net weight(lb) | | 227 | 241 |

4. ELECTRICAL PART SPECIFICATIONS & STANDARD

| ITEM | | STANDARD | |
|----------------|---------------|----------------------------------|----------------|
| Model | | RB1955SW/SH/VQ | RB2155SW/SH/BB |
| Rated Voltage | | 115V | |
| Frequency | | 60HZ | |
| Compressor | Model | MK172C-L2U | |
| | Starting type | RSCR | |
| | Refrigerant | R134a | |
| | Oil Charge | Freol α-10c(Ester), 265cc | |
| Evaporator | Freezer | Split Fin & Tube Type | |
| | Refrigerator | Split Fin & Tube Type | |
| Condenser | | Forced & Natural Convection Type | |
| Dryer | | Molecular Sieve XH-9 | |
| Capillary tube | | ID0.82 x L3000 | |
| Earth screw | | BSBN(Brass screw) | |
| Door switch | | AC125V 1.4A(SSD-6D) | |

ELECTRICAL PART SPECIFICATIONS & STANDARD

| ITEM | | | STANDARD | | | |
|--|-------------------|--|-----------------------|--|---------|--|
| Temperature | Freezer | Type | Temperature Selection | ON(°F) | OFF(°F) | |
| | | F-Sensor | -14°F | -12.0°F | -16.0°F | |
| | | | -2°F | 0°F | -4°F | |
| | Refrigerator | R-Sensor | 8°F | 10°F | 6°F | |
| | | | 34°F | 36°F | 32°F | |
| | | 40°F | 42°F | 38°F | | |
| Electrical parts | Defrosting | First Defrost Cycle (Concurrent Defrost of F and R) | | 4hr ±10min | | |
| | | Defrost Cycle(FRE) | | Min. 12hrs, Max. 22Hrs | | |
| | | Defrost Cycle(REF) | | Min. 6hrs, Max. 11Hrs | | |
| | | Pause Time | | 10±2min | | |
| | Sensor | Freezer-Sensor | | THERMISTOR (502AT), SPEC:5.0KΩ AT 77°F | | |
| | | Refrigerator-Sensor | | | | |
| | | FRE Evap-Sensor | | | | |
| | | REF Evap-Sensor | | | | |
| | | Ambient TEMP-Sensor | | | | |
| | Heater | Defrost Heater(FRE) | | 242W | | |
| | | Drain Heater(FRE) | | 52W | | |
| | | Defrost Heater(REF) | | 120W | | |
| | | Drain Heater(REF) | | 38W | | |
| | Fuse | Thermal-Fuse for preventing overheating of Freezer Defrost-Heater | | AC250V 10A 77±5°C | | |
| Thermal-Fuse for preventing overheating of Freezer Defrost-Heater | | | | | | |
| Capacitor | RUNNING | RSCR 250VAC, 12 μ F | | | | |
| Over-Load Protector | MODEL | 4TM437RHBYY-53 | | | | |
| | TEMP. ON | 130±5 | | | | |
| STARTING- RELAY | TEMP. OFF | 69±9 | | | | |
| | MODEL | J531Q33E100M200-2 | | | | |
| | OPERATION | 10±20% | | | | |
| MOTOR-FAN | FRE. | IS3210-SNP6D | | | | |
| | REF. | IS3208-SNP6H | | | | |
| | CIRCUIT | IS3208-SCH6A | | | | |
| LAMP | FRE(INCANDESCENT) | 110V-130V/15W | | | | |
| | REF(INCANDESCENT) | 110V-130/30W | | | | |

5. WARRANTY INFORMATION

SAMSUNG REFRIGERATOR (18 Cubic Feet and Larger Capacity)

LIMITED WARRANTY TO ORIGINAL PURCHASER

This SAMSUNG brand product, as supplied and distributed by Samsung Electronics America, Inc. (SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for a limited warranty period of:

One (1) Year Parts and Labor on Refrigerator
Five (5) Years Parts and Labor on Sealed Refrigeration System Only*
(*Compressor evaporator, condenser, drier, connecting tubing)

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States. To receive warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures. Warranty service can only be performed by a SAMSUNG authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center.

SAMSUNG will repair or replace any part found to be defective, at our option and at no charge as stipulated herein, with new or reconditioned parts during the limited warranty period specified above. All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

In-home service will be provided during the warranty labor period subject to availability within the contiguous United States. In-home service is not available in all areas. To receive in-home service, the product must be unobstructed and accessible from floor level to service personnel. If during in-home service repair cannot be completed, it may be necessary to remove, repair and return the product. If in-home service is unavailable, SAMSUNG may elect, at our option, to provide for transportation of our choice to and from a SAMSUNG authorized service center. Otherwise, transportation to and from the SAMSUNG authorized service center is the responsibility of the purchaser.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, noncommercial use of this product, and shall not apply to the following, including, but not limited to: damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external plumbing and leaks, external wiring, circuit breakers, fuses or connectors not supplied and authorized by SAMSUNG, or which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; loss of food due to spoilage; consumable items including filters and light bulbs.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.


Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

To obtain warranty service, please contact SAMSUNG at:

SAMSUNG CUSTOMER CARE CENTER
400 Valley Road, Suite 201, Mt. Arlington, NJ 07856, Tel: 973-601-6000, Fax: 973-601-6001
1-800-SAMSUNG (1-800-726-7864) and www.SAMSUNGUSA.com


6. Interior Views and Dimensions

6-1) Shelves and Bins

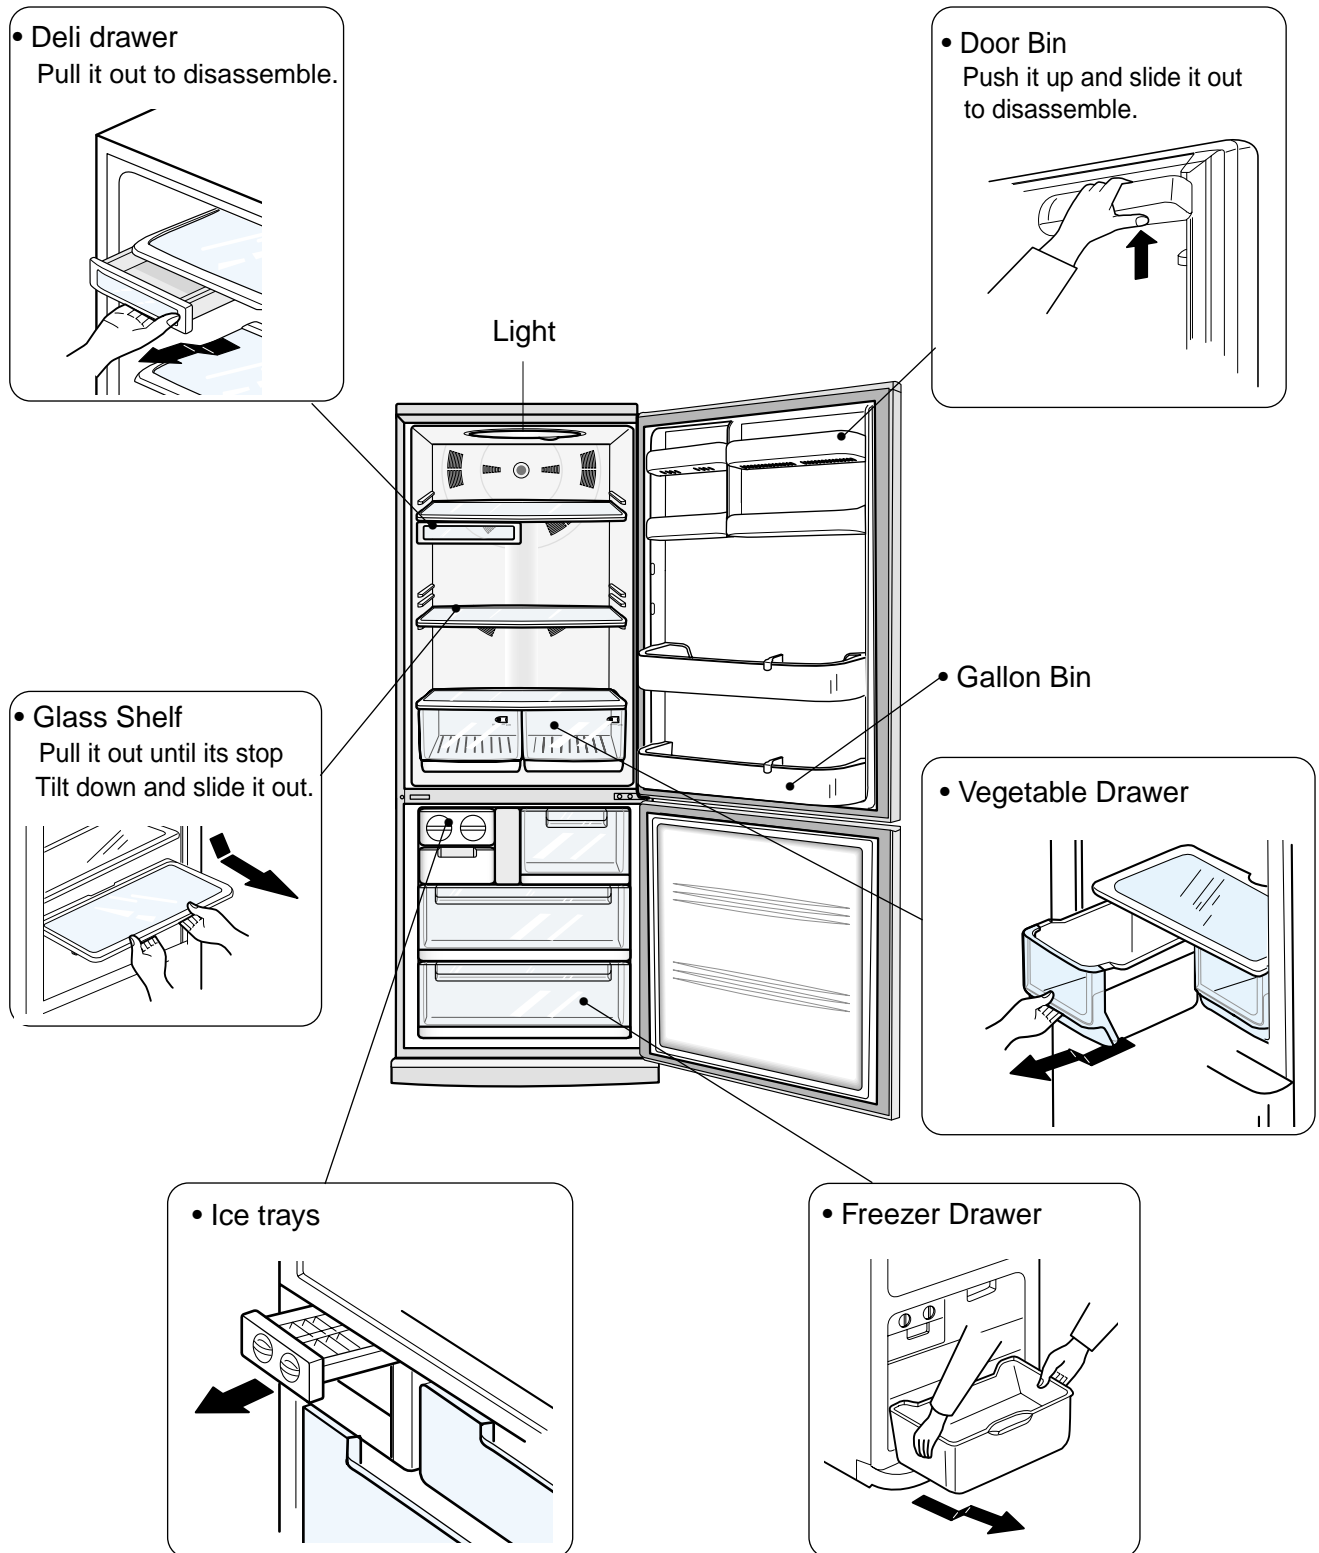

Interior Views and Dimensions

6-2) Dimensions of Refrigerator (Inches)

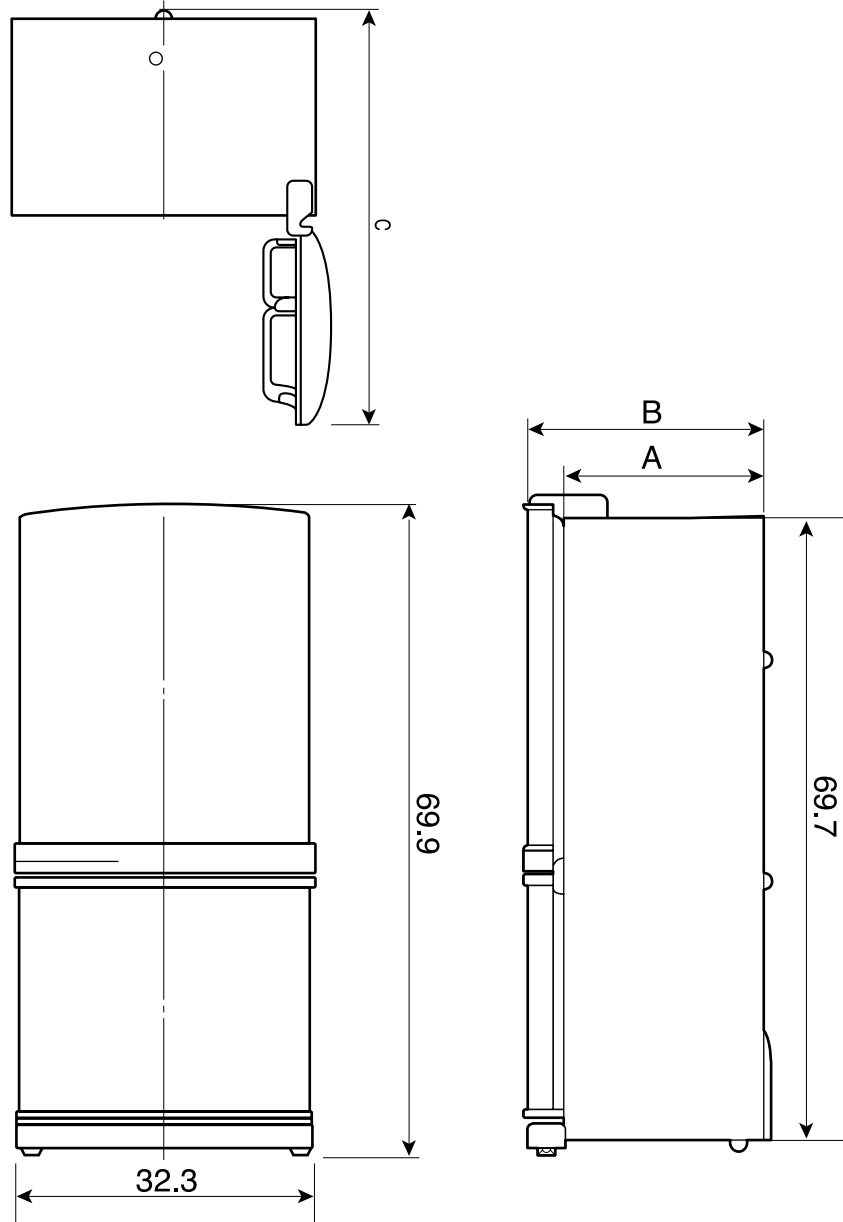


| MODEL | A | B | C |
|--------|------|------|------|
| RB1955 | 24.3 | 28.3 | 57.8 |
| RB2155 | 26.3 | 30.3 | 59.8 |

7. Refrigeration Cycle and Cool Air Circulation Route


7-1) Refrigerant Route in Refrigeration cycle

Compressor → Sub condenser → Cluster pipe → Hot pipe → Dryer → Capillary tube → R-Evaporator → F-Evaporator → Accumulator → Suction pipe → Compressor

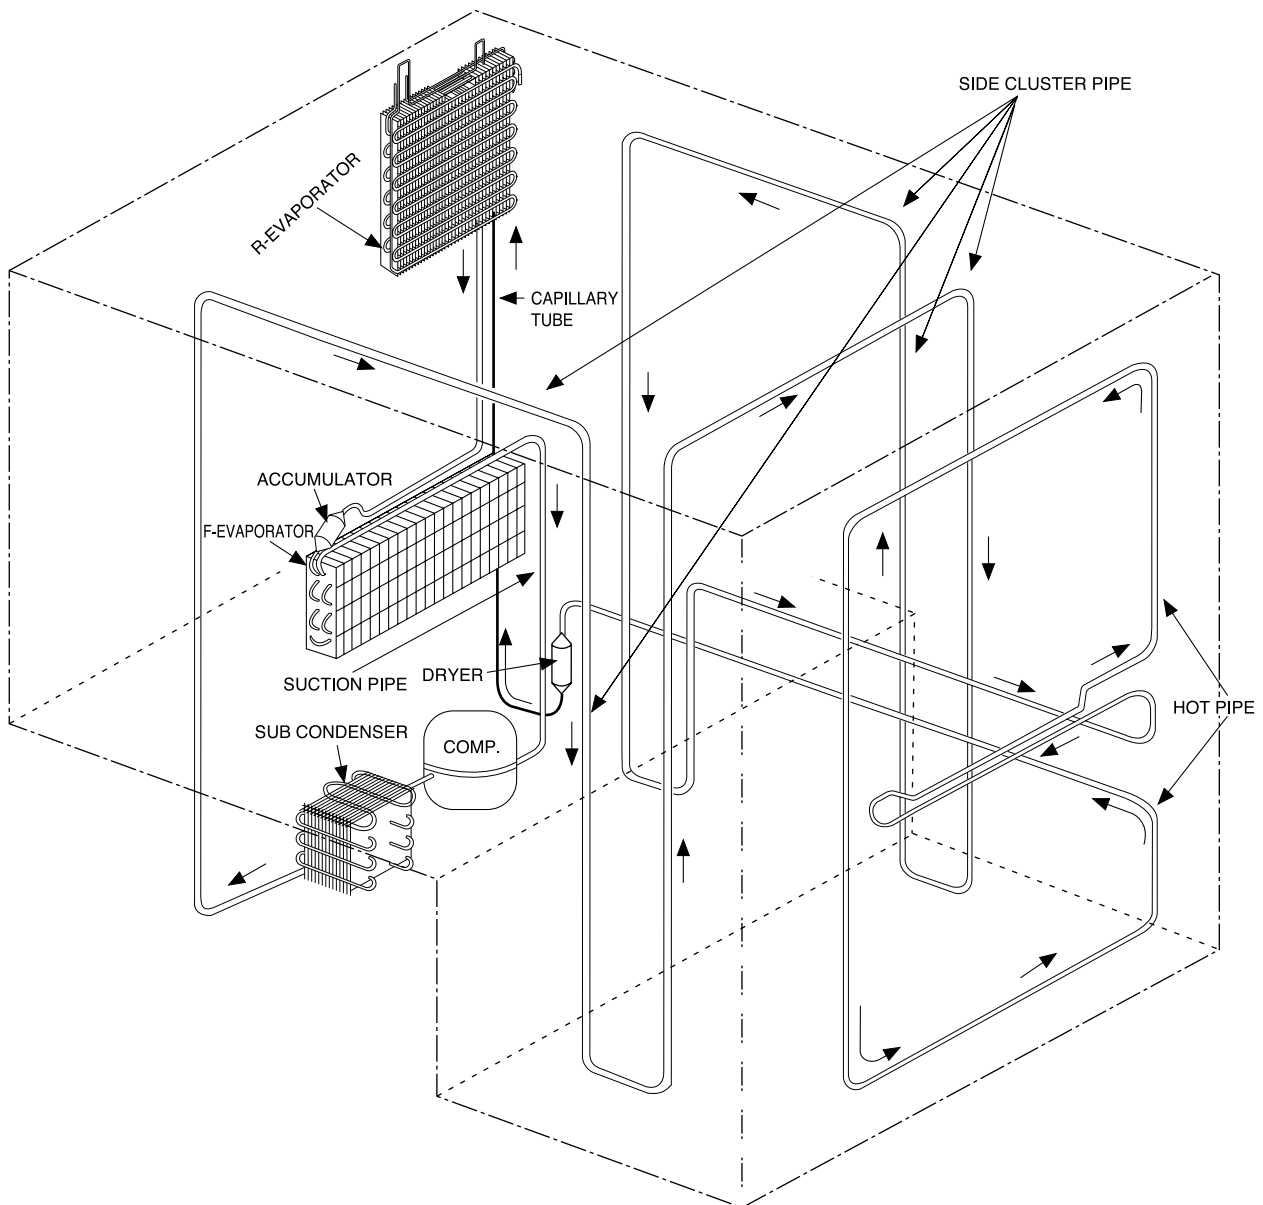

Refrigeration Cycle and Cool Air Circulation Route

7-2) Cool Air Circulation

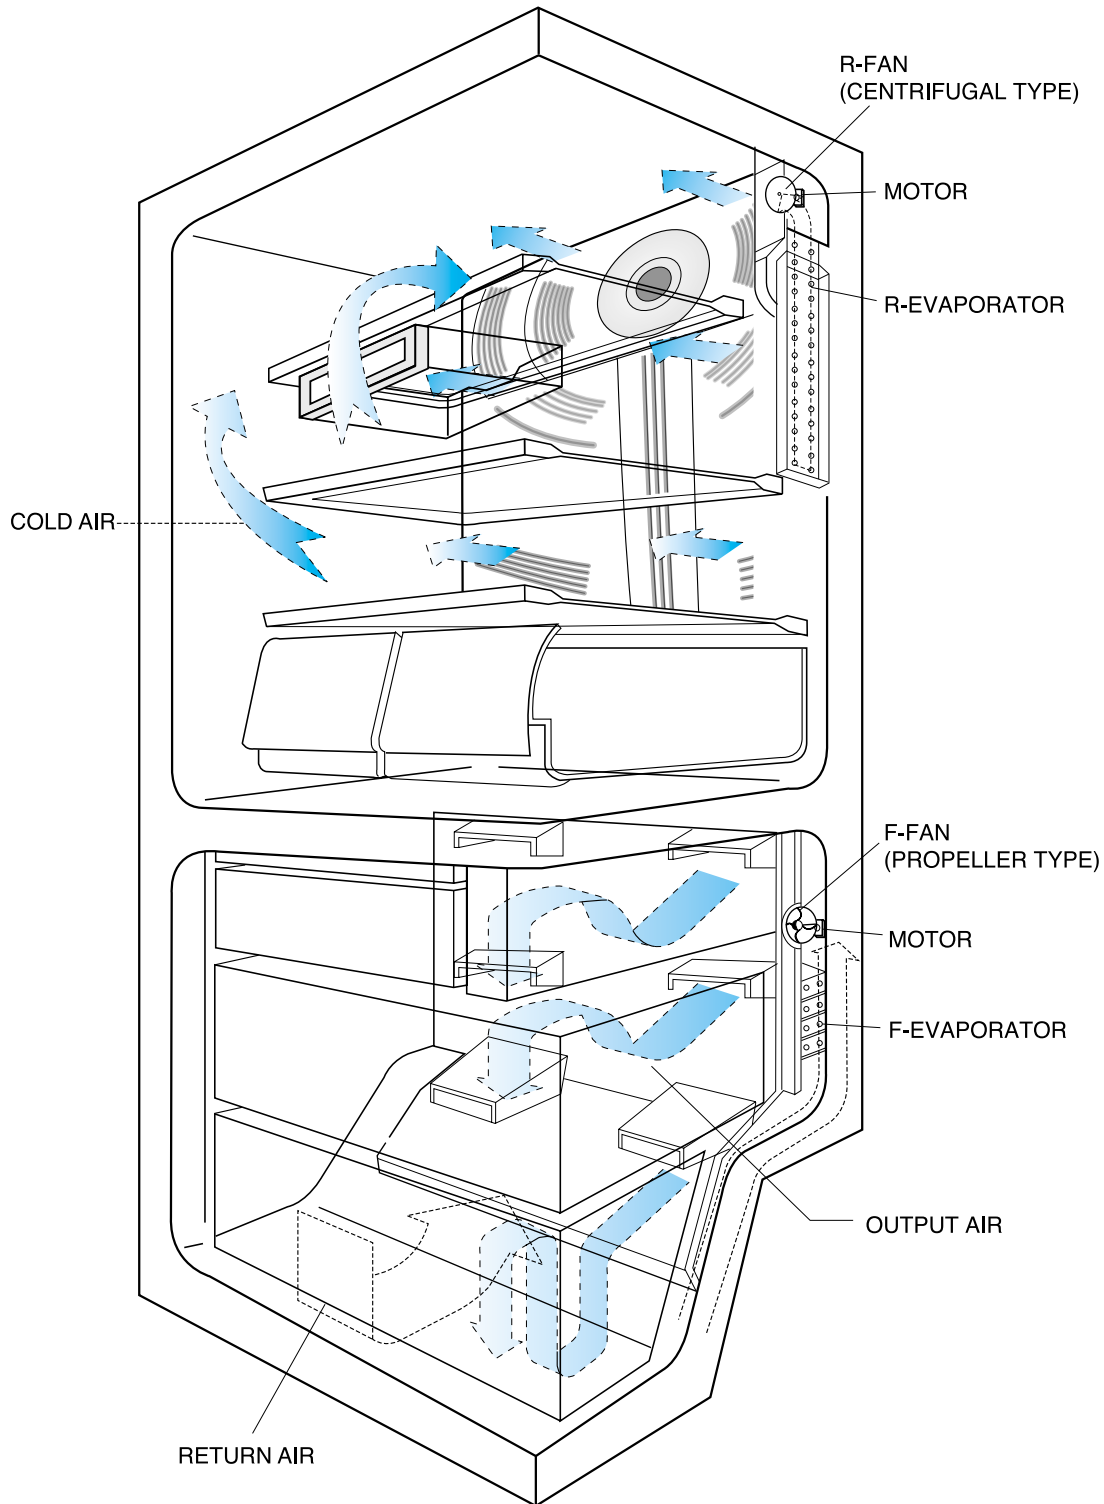

8. Mechanical Disassembly


Refrigerator Disassembly

| | |
|--|----|
| Control Panel | 13 |
| Refrigerator Light | 14 |
| Freezer Light | 14 |
| Evaporator Cover in the Refrigerator | 15 |
| Evaporator Cover in the Freezer | 16 |
| Evaporator in the Freezer | 17 |
| Evaporator in the Refrigerator | 17 |
| Machine Compartment & Electric Box | 18 |

Mechanical Disassembly

Control Panel

1. Remove the screws.
2. Pull out the control panel.
3. Disconnect the wire connector.

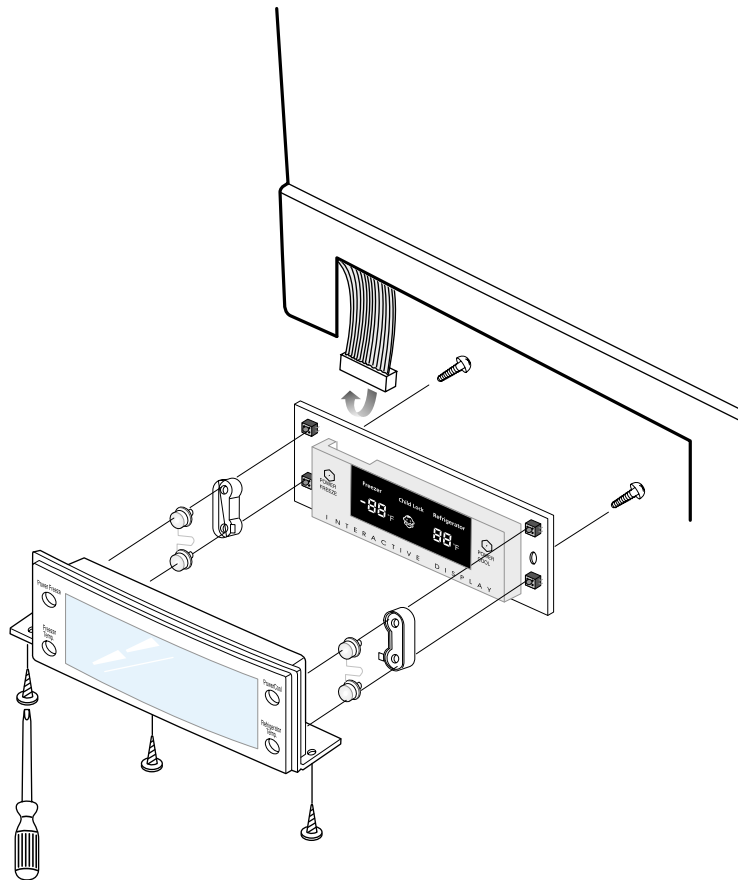

Mechanical Disassembly



Warning

Always unplug the power cord before replacing the refrigerator lamp. There is the danger of electric shock.

Refrigerator Light

1. Remove the screw.




2. Remove the lamp cover by unlocking the tabs and pulling the cover down.



3. Replace the lightbulb by turning it counter-clockwise.



4. After replacing the bulb, reattach the cover and the screw it again.
5. Plug the power cord in and check the lamp by pressing the R-door switch.

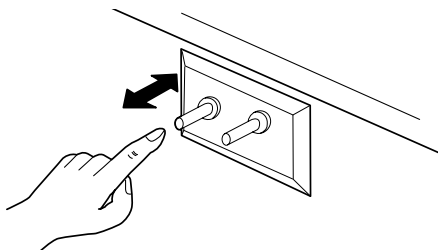


Freezer Light


1. Remove the cover by pressing the bottom tab.



2. Replace the lightbulb by turning it counter-clockwise.

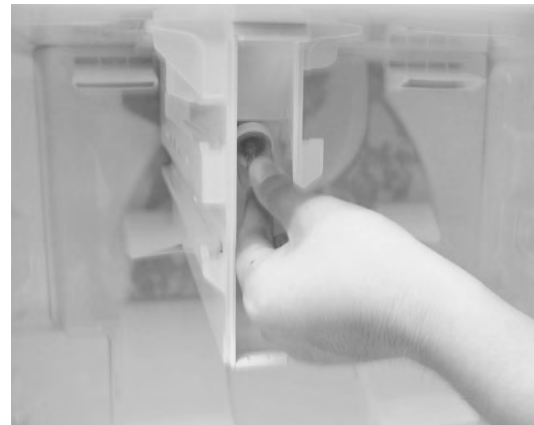


3. Reattach the cover and check the lamp by pressing door switch.

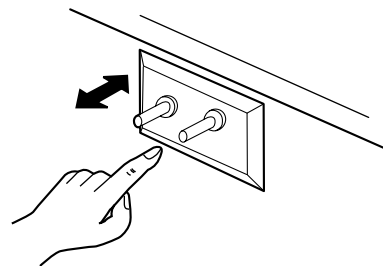


Mechanical Disassembly

Evaporator Cover in the Refrigerator


1. Remove all shelves and drawers from the refrigerator.

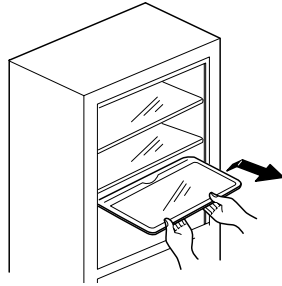


2. Pull out the screw caps with a small flat-blade screwdriver.
3. Remove 6 Phillips screws from the cover.

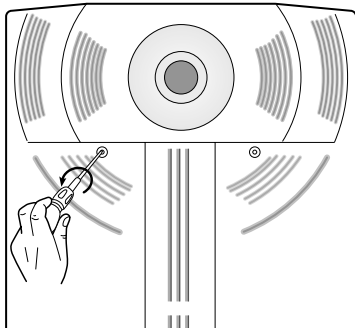


4. Unlock the 2 tabs with a flat-blade screwdriver on each side of the bottom cover.
5. Remove the evaporator cover by pulling out from the bottom of the evaporator cover.

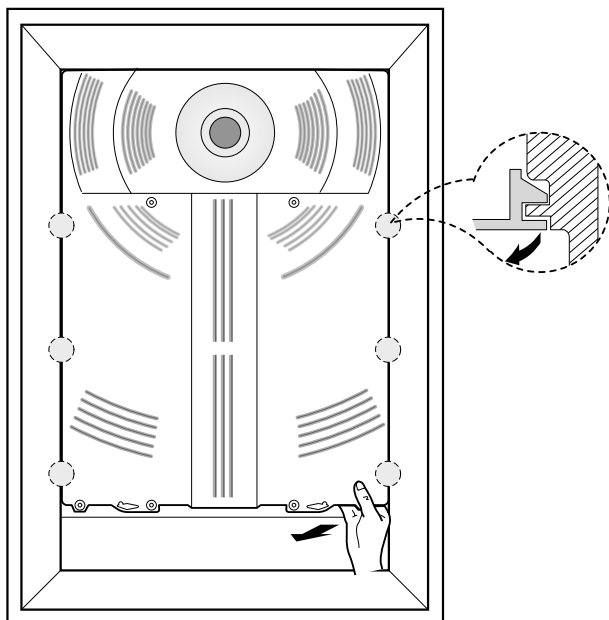

6. Disconnect the wire connector.

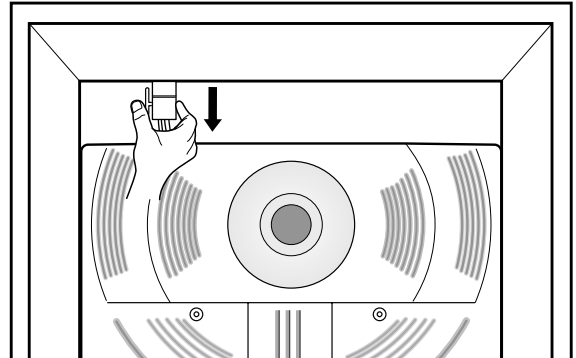


- Ductwork of the evaporator fan assembly.

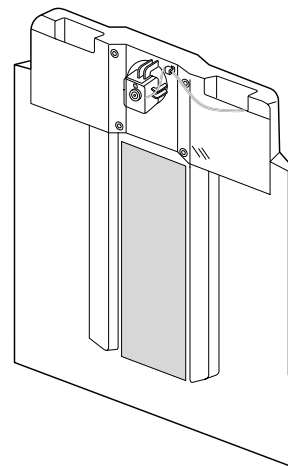


Mechanical Disassembly

Evaporator Cover in Freezer


1. Remove all drawers from the freezer.

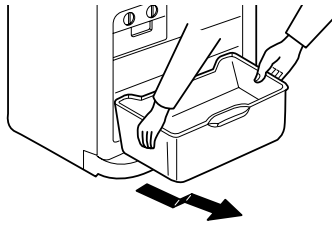


2. Remove screws (2) from the support rail.

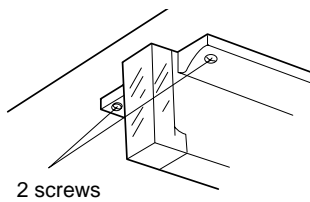


3. Pull down the holder of the support rail and disconnect the wire connector to remove it.

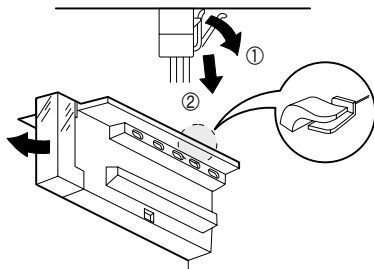


4. Unlock the tabs around the evaporator cover from the bottom.

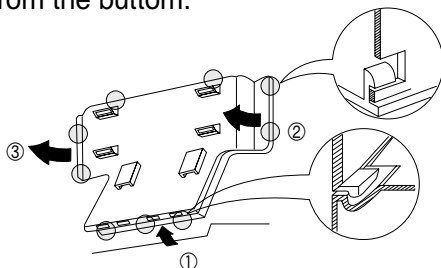

5. Disconnect wire connector from the top-left corner.

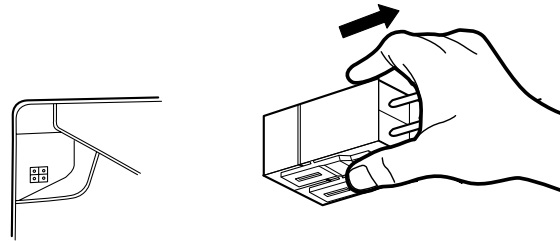

6. Remove 2 screws from the rear cover of the freezer evaporator and unlock the tabs to remove it.

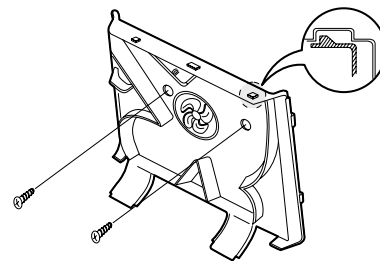


Mechanical Disassembly

Evaporator in Refrigerator

Evaporator is located in the bottom of refrigerator.


1. Take off the ductwork in refrigerator.
2. Disconnect the wire connector.(Heater and Thermistor)
3. Desolder the capillary tube and the suction line from the evaporator.
4. Remove the evaporator.
5. With a file, score the capillary tube just upstream of the soldered point. Break off the soldered section to help prevent solder from plugging the tube during soldering.
6. Place a new evaporator and braze the suction and capillary tube to evaporator using silver solder.
7. Install a replacement dryer.
8. Evacuate and recharge the system using reasonable procedures.

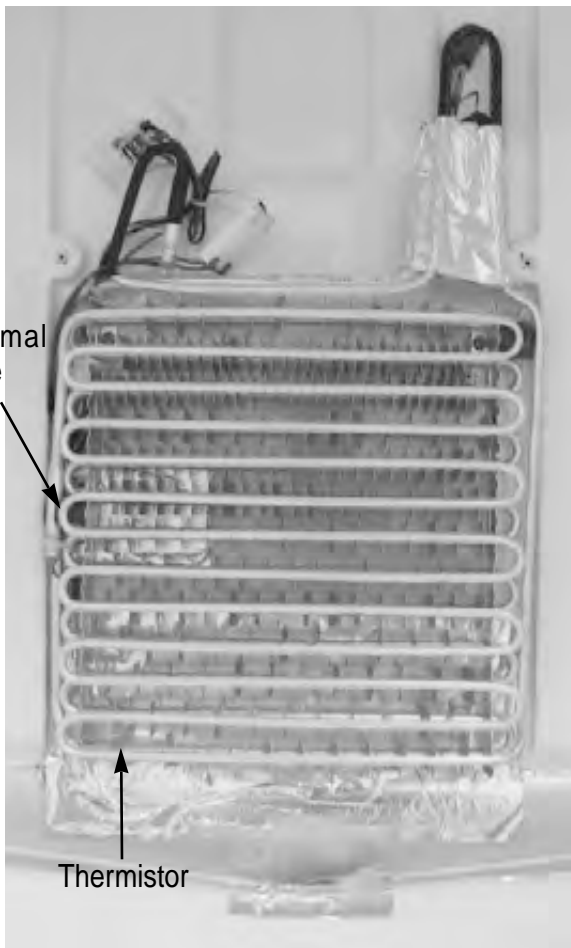

Evaporator in Freezer

Evaporator is located in the bottom of freezer to produce cold air driven across the evaporator coils.

1. Take off the ductwork in Freezer.
2. Disconnect the wire connector (Heater, Bimetal, and Thermistor).
3. Desolder the inlet and outlet tubes.
4. Remove the evaporator.
5. Take the same steps to seal the system as mentioned earlier.

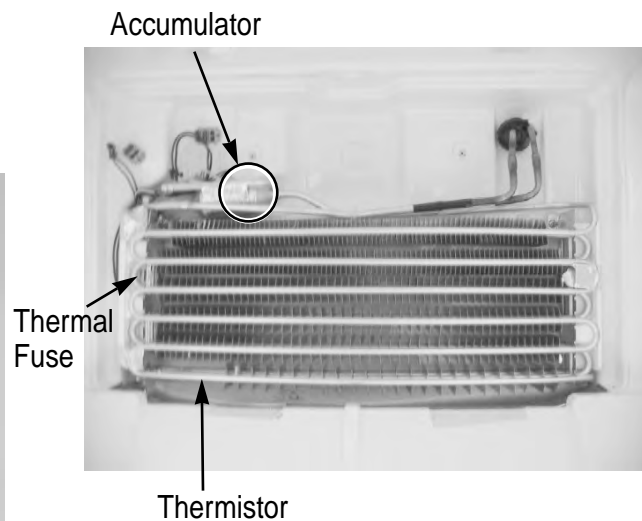

Mechanical Disassembly


Machine Compartment & Electric Box




Warning

Make sure the power cord is unplugged before replacing any electric components.


1. Unplug the power cord.

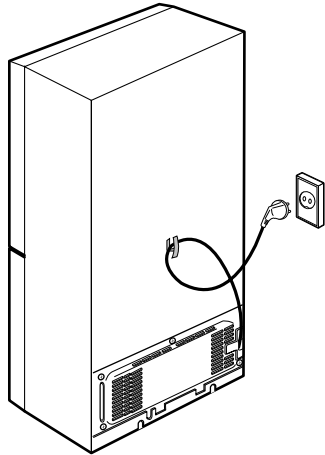


2. Remove the screws of the compartment cover. Slide it up and take out from the refrigerator.

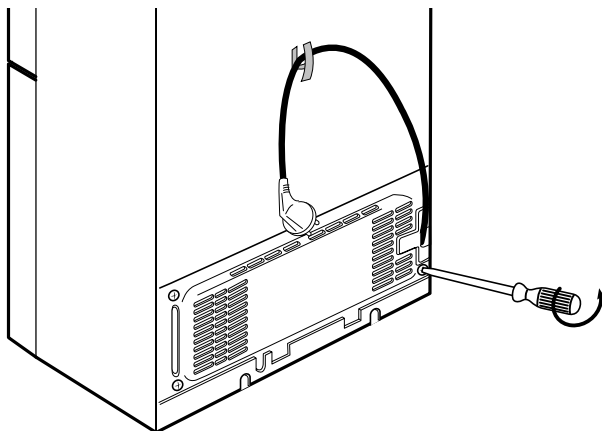


3. Machine compartment assembly

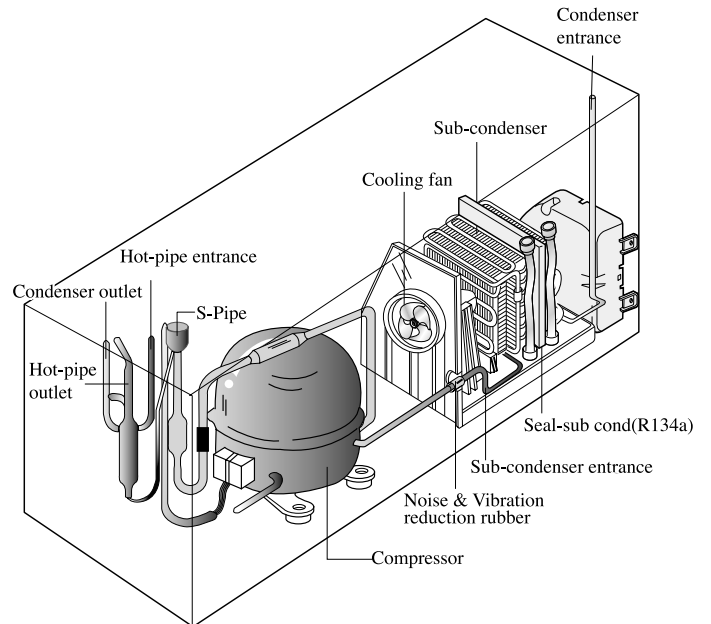

4. Disassemble the electric box cover after removing the screws with a Phillips screwdriver.

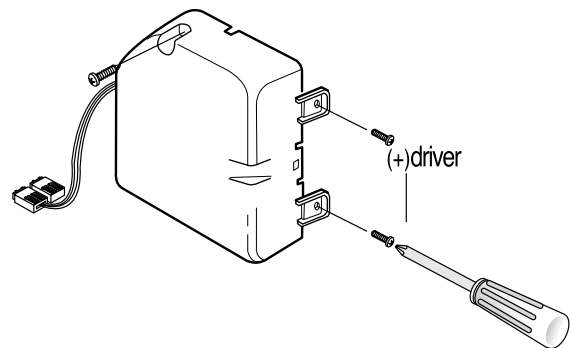

5. Electric box assembly

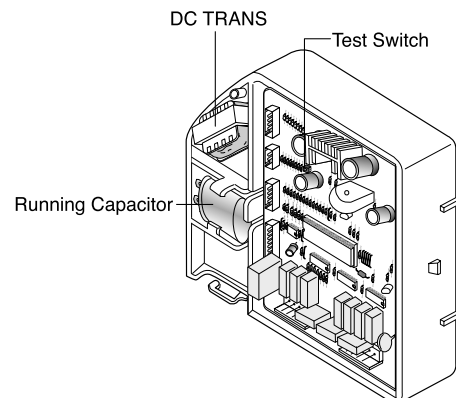


9. Operation Function

| | |
|--|----|
| 9-1) Digital Panel | 20 |
| 9-2) Temperature Control Function | 20 |
| 9-3) Power Freeze and Power cool Functions | 20 |
| 9-4) Sound Function | 21 |
| 9-5) Defrost Function | 21 |
| 9-6) Forced Operation Function | 22 |
| 9-7) Power failure compensating Function | 23 |
| 9-8) Exhibition Function | 23 |
| 9-9) Self - Diagnostics Function | 23 |
| 9-10) Component Load Operation Function. | 24 |
| 9-11) C-Fan Motor Delay function | 25 |

Operation Function

9-1) Digital Panel

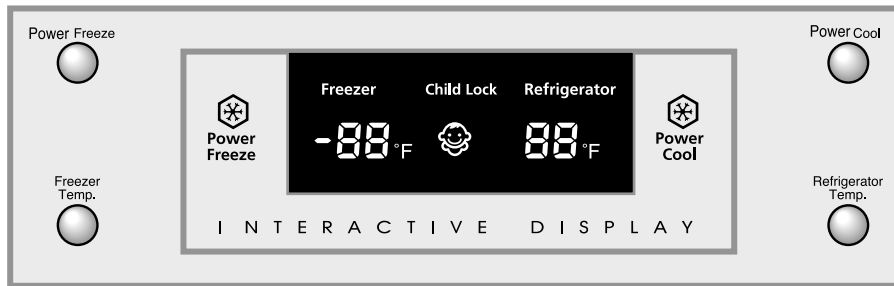

9-2) Temperature Control Function

When the system power is initially engaged, the default set temperatures are -2°F for the freezer and 38°F for the refrigerator, respectively. The numbers shown on the digital display panel stand for the actual compartment temperatures. When the compartment temperatures go down, so do the numbers on the display panel, and finally they reach the set temperatures. Once the system is stabilized, the display temperatures are the set temperature.

1) Freezer Temperature Control.

To select a set temperature, press the Freezer Temp. button. The display shows the set temperature from -14°F to 8°F in sequence.

2) Refrigerator Temperature Control.

To select a set temperature, press the Refrigerator Temp. button. The display shows the set temperature from 34°F to 46°F in sequence.

3) Child Lock Button

When these two buttons are pressed at the same time for 3 sec., the Power Freeze, Power Cool, Freezer Temp, Refrigerator Temp, are locked and can not be modified. If you press the two buttons at the same time again for 3 sec., the child lock function is cancelled.

note) Because of the temperature sensor sensitivity, the refrigerator can be under and/or over cooled when the air flow is blocked by stored foods. (Temperature range of the sensor : $15^{\circ}\text{F} \sim 80^{\circ}\text{F}$)
In the event of a power failure, if the freezer temperature is maintained lower than 41°F , the last

9-3) Power Freeze Function and Power Cool Functions.

- Select the Power Freeze or Power Cool buttons separately.
- These buttons are toggled ON and OFF and the indicators as well.
- Although you select Power Freeze or Power Cool, the set temperatures in the freezer and refrigerator are not changed.
- The set temperatures for the compartments can be changed while these functions are in use.

1) Power Freeze function

- 1-1) When you press the Power Freeze button, the LED indicator lights right away, but there is 10 seconds lag time to an actual operation. When this button is pressed again, the Power Freeze function stops and the indicator is off immediately.
- 1-2) If you select Power Freeze, both the compressor and the freezer fan run for $2 \frac{1}{2}$ hours continuously.
- 1-3) During Power Freeze, the freezer retains the current settings.
- 1-4) When Power Freeze expires, the indicator goes off and the freezer set temperature will be restored.

2) Power Cool function

- 2-1) Power Cool operation and the indicator work exactly same as the Power Freeze function.
- 2-2) When Power Cool is selected, COMP and R-FAN operate continuously until the refrigerator reaches 25°F . This function will be terminated after $2 \frac{1}{2}$ hr running.

Operation Function

- 3) When you select Power Freeze and Power Cool together
Each function works at the same time. The COMP and F-FAN run continuously and the R-FAN runs until 25°F in the refrigerator.
- 4) Initial Power-On
 - 4-1) When the freezer and the refrigerator temperatures are higher than 14°F and 50°F, respectively, if Power Freeze is selected, then the R-FAN will be off. If Power Cool is selected, then the F-FAN will be off.
 - 4-2) When both functions are selected, there is no benefit of fast cooling for each compartment.

9-4) Sound Function

- 1) Sound function
 - 1-1) To make sure a command input, whenever a button is pressed, a “ding-dong” sounds.
 - 1-2) When two or more buttons are pressed simultaneously or if a wrong button is pressed, there is no sound.
- 2) Door Open Alarm
 - 2-1) When the doors remain open for 2 minutes, there are 10 times beeps.
 - 2-2) If the doors continue to remain open more than 2 minutes, the additional 10 beeps interval will change to 1 minute.
 - 2-3) The beeps will cease immediately when the doors are closed.

9-5) Defrost Function

- 1) A defrost is determined based on the accumulated compressor on-time.
- 2) When the power is engaged for the first time, the defrost cycle for the freezer and the refrigerator will begin after 4 hours of the accumulated compressor on-time.
- 3) A defrost interval depends on the ambient temperature, the number of door openings, and the door open time.
- 4) The defrost cycle is composed of a pre-cool process (F-Fan and COMP) for 30 minutes, a heating process, and a resting for 8-12 minutes to drain.
- 5) A minimum interval is 6 hours and a maximum is 11 hours for the refrigerator, and 12 hours and 22 hours for the freezer, respectively.
- 6) When the system runs only for the refrigerator (R-Fan and COMP) and if the refrigerator can not reach the set.

Operation Function

9-6) Forced Operation function (Power cool key + Refrigerator Temp 8sec.)

- This function enables a pull-down mode, a defrost mode for the refrigerator only, a defrost mode refrigerator at the same time, and a cancellation of this function.
- Press Power Cool and Refrigerator Temp. buttons for 8 seconds simultaneously to get in the ready mode for a forced operation.
- The display panel will return to normal after 15 seconds in the ready mode.
- At the ready mode, press any button once to start a pull-down operation, twice for a defrost cycle for the refrigerator, three times for a defrost cycle for the freezer and the refrigerator, and finally four times for cancellation of this function.
- Another way to cancel this function is to simply plug out and in the power cord.

1) Pull-down Operation

- 1-1) At the ready mode, press any button once then the buzzer will beep (ON for 1/2 second and OFF for 1/2 second) until this mode is cancelled.
- 1-2) At this pull-down mode, the compressor will start immediately (No 5 minute delay) and if the system is in the defrost cycle, it will be cancelled right away.

note) If this pull-down mode begins right after the compressor was off, the compressor may not start to run due to an overload condition.

- 1-3) At this mode, the compressor and freezer fan will operate continuously for 24 hours and the refrigerator fan will be on and off according to the set temperature(34°F)
- 1-4) After 24 hour operation, the system will be cycled at -14°F for the freezer and 34°F for the refrigerator.
- 1-5) In order to cancel this mode at any time, select the next mode on the ready mode or power off the system.

2) Defrost operation

- 2-1) At the pull-down mode, press any button again on the ready mode to begin the defrost cycle for the refrigerator.
- 2-2) The beep sound continues for 3 second at the beginning, then ON for 3/4 seconds and OFF for 1/4 second until this mode cease.
- 2-3) After this operation, the system will come back to normal operation.
- 2-4) At this mode, press any button again on the ready mode to operate the defrost cycles for both compartments.
- 2-5) The beep sound continues for 3 seconds at that time, then ON for 1/4 second and OFF for 3/4 seconds until the defrost operation cease.

3) Cancellation

- 3-1) At the R,F-Defrost mode, press any button again on the ready mode to return to a normal operation.
- 3-2) Simply unplug the power cord, then plug it again to return to a normal operation.

Operation Function

9-7) Power failure compensating function

- 1) When the freezer temperature is lower than 50°F, all functions on the display panel will be restored.
- 2) When the freezer temperature is higher than 50°F, all functions will be initialized.
(2°F for the freezer, 38°F for the refrigerator, and Cubed for the Ice Type)

9-8) Exhibition Function

This function is for a display purpose on the floor of show room or store.

- 1) Mode ON/OFF
 - 1-1) For the exhibition mode, press Power Freeze and Freezer Temp. buttons simultaneously for 5 seconds until a “ding-dong” sounds.
 - 1-2) Press the same time buttons again for 5 seconds to cancel this mode put with a “ding-dong” sound.
- 2) Operation
 - 2-1) Most of the system function except the compressor operation are working properly.
 - 2-2) There is no defrost cycle in this mode.

9-9) Self-Diagnostics function

- 1) Self-Diagnostics in the initial Power ON
 - 1-1) The control board performs a self diagnostics test within 1 second and check out the temperature sensors abilities.
 - 1-2) If a sensor failure occurs, a corresponding LED segment will blink.
 - 1-3) When a LED segment blinks, only the cancellation function (Press Power Freeze and Power Cool buttons simultaneously for 8 seconds) is acceptable.
 - 1-4) After a replacement of bad sensor or a cancellation of this function, this self diagnostics will end.
- 2) Self-Diagnostics in the normal operation
 - 2-1) To select this function, press Power Freeze and Power Cool buttons simultaneously for 5 seconds with an audible tone.
 - 2-2) In the self diagnostic mode, only corresponding LED segments will be illuminated (see the check list on)
 - 2-3) After a 30 second illumination of error signal, the system will return to the normal operation.

Operation Function

Table 1. Display table of self diagnosis.

| No | Item | LED Display | Details | Remarks |
|----|--------------------|-------------------|--|---|
| 1 | R-sensor | REFRIGERATOR 5 | <ul style="list-style-type: none"> • Connector contact failure • Short-circuit | <ul style="list-style-type: none"> • Suspected to be below -58°F • Suspected to be over 150°F |
| 2 | R-defroster sensor | REFRIGERATOR d | <ul style="list-style-type: none"> • Connector contact failure • Short-circuit | <ul style="list-style-type: none"> • Suspected to be below -58°F • Suspected to be over 150°F |
| 3 | Outer sensor | FREEZER E5 | <ul style="list-style-type: none"> • Connector contact failure • Short-circuit | <ul style="list-style-type: none"> • Suspected to be below -58°F • Suspected to be over 150°F |
| 4 | F-sensor | FREEZER F5 | <ul style="list-style-type: none"> • Connector contact failure • Short-circuit | <ul style="list-style-type: none"> • Suspected to be below -58°F • Suspected to be over 150°F |
| 5 | F-defroster sensor | FREEZER d5 | <ul style="list-style-type: none"> • Connector contact failure • Short-circuit | <ul style="list-style-type: none"> • Suspected to be below -58°F • Suspected to be over 150°F |

9-10) Component Load Operation Function

- 1) In the normal operation, press Power Freeze and Power Cool buttons simultaneously for 3 second, then the display panel will blink for 2 seconds.
- 2) Press Refrigerator Temp. button to get into this check mode with an audible tone.
- 3) Each illuminating LED segment stands for the component which has an output signal from the control board.
- 4) This mode will terminate automatically after 30 seconds.

Operation Function

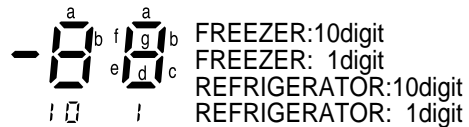
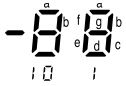


Table 2. Display table of the presently operating parts.

| No | Content | Display LED | Operation | Remark |
|----|--------------------|--------------------------|---|--|
| 1 | R-fan | a : REFRIGERATOR 1 digit | Include R-fan activation | Ref. 6.button scan and display circuitry  |
| 2 | R-defrost heater | c : REFRIGERATOR 1 digit | Defrost heater activation | |
| 3 | Initial start mode | d : REFRIGERATOR 1 digit | Initial power is activated ON | |
| 4 | Over load mode | e : REFRIGERATOR 1 digit | Outer temperature is over 95 °F | |
| 5 | Low temp.mode | f : REFRIGERATOR 1 digit | Outer temperature is below 68 °F | |
| 6 | Exhibition mode | g : REFRIGERATOR 1 digit | Exhibition mode is operated together | |
| 7 | Comp | a : FREEZER 1 digit | Led ON when COMP activation is included | |
| 8 | F-fan | b : FREEZER 1 digit | Led ON F-fan activation is included | |
| 9 | F-defrost heater | d : FREEZER 1 digit | Led ON when F-heater activation is included | |
| 10 | F-Lamp | a : FREEZER 10 digit | Led ON when F-lamp activation is included | |
| 11 | R-Lamp | b : FREEZER 10 digit | Led ON when R-lamp activation is included | |

※ 3, 4, and 5 only explains the system operation states according to the ambient condition.

9-11) C-Fan Motor Delay Function of the Machine Compartment

- According to the ambient temperature, the condenser fan located in the machine compartment is operated with different modes.


| | Ranges of ambient temp. | Operation |
|-------------------------|-------------------------|--|
| C-FAN Delay function | Above 66 °F | C-FAN is ON as soon as the compressor is on. |
| | 61 °F ~ 65 °F | C-FAN is ON with 5 minutes delay from the compressor on. |
| | Below 60 °F | C-FAN is OFF regardless of the compressor operation. |



10. Circuit Descriptions

| | |
|--|----|
| 10-1) Source Power Circuit | 27 |
| 10-2) Oscillator Circuit | 27 |
| 10-3) Reset Circuit | 28 |
| 10-4) Door S/W Sensing Circuit | 28 |
| 10-5) Temperature Sensing Circuit | 29 |
| 10-6) Key Scan and Display Circuit | 30 |
| 10-7) Load Drive Circuit | 31 |
| 10-8) Option Circuit | 32 |

Circuit Descriptions


10-1) Source Power Circuit

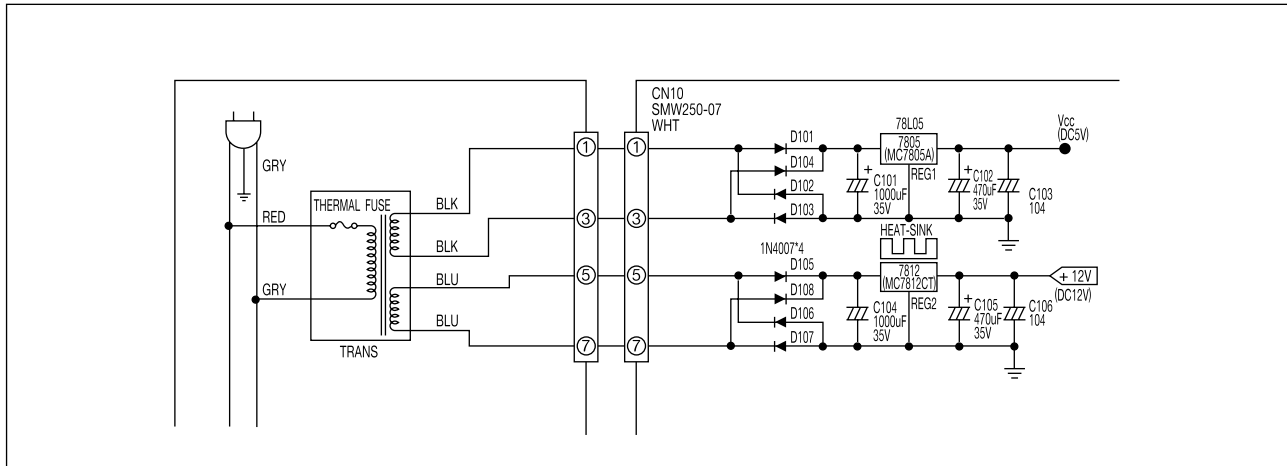
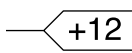
| Voltage | Circuit used |
|--|--------------------------------------|
|  +12 (DC 12V) | Relay Operation & LED Display |
|  Vcc (DC 5V) | Power around MICOM & Sensor Detector |

- 1) The input AC voltage drops to AC 8 volts on the transformer secondary side between ① ~ ③ at CN 10. The rectified voltage passed through D101 ~ 104 becomes DC 5V through voltage regulator MC7805(REG1).
This (DC5V) is supplied to the control board and sensor's circuits.
- 2) The input AC Voltage drops to AC 15 volts on the transformer secondary side between ⑤ ~ ⑦ at CN 10. The rectified voltage passed through D105 ~ D108 becomes DC 12V through voltage regulator MC7812CT (REG2).
This (DC12V) is supplied to the relay operation and LED display.

10-2) Oscillator circuit

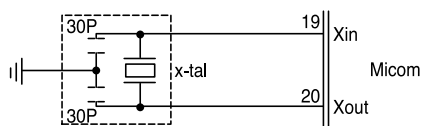

| Port | Oscillating Frequency |
|-----------|-----------------------|
| Xin(#19) | 4.00MHz |
| Xout(#20) | 4.00MHz |


±0.5% Error

It is designed for clock generation and time calculation for synchronizing transmission and reception on the logic elements inside the MICOM. If the X-TAL specification changes, MICOM may make an error.

(The standard components should be used.)

Circuit Descriptions


10-3)Reset Circuit

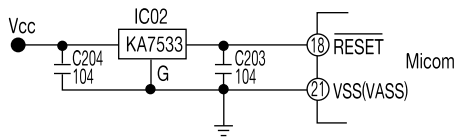

When the power is supplied to MICOM, the reset circuit initializes RAM and other sectors of MICOM. A reset voltage maintains “low” for hundreds of μ sec comparing to MICOM Vcc voltage when the power is in. It also maintains “high”(5V) during normal operation. But, when Vcc drops to 3.4V-3.7V, a reset port becomes “low”.

| Port | Voltage |
|-------|---------|
| Vcc | DC 5V |
| Reset | DC 5V |

10-4) Door S/W Sensing Circuit

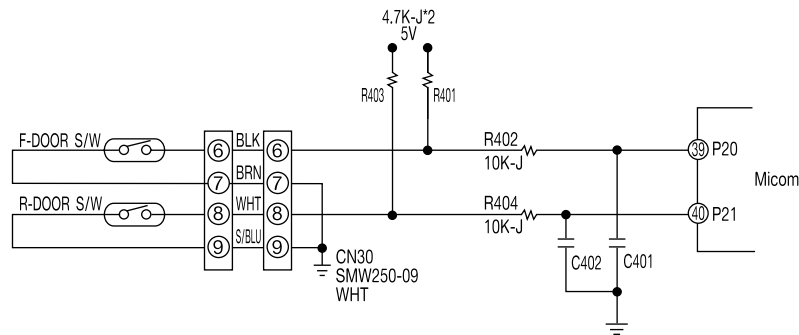


| DOOR | Door Conditions | Door S/W Contact | MICOM PIN NO | Micom Input Voltage |
|------|-----------------|------------------|--------------|---------------------|
| F | CLOSE | OPEN | # 39 | “HIGH” |
| | OPEN | CLOSE | | “LOW” |
| R | CLOSE | OPEN | # 40 | “HIGH” |
| | OPEN | CLOSE | | “LOW” |

- 1) If a door is open, the door S/W contact is closed. Then MICOM receives “low” signal and detects door open, A relay control circuit receives “HIGH” signal and turn Lamp on.
- 2) If a door is closed, the door S/W contact is open. Then MICOM receives “high” signal and detects door close, A relay control circuit receives “LOW” signal and turn Lamp off.

Circuit Descriptions

10-5) Temperature Sensing Circuit

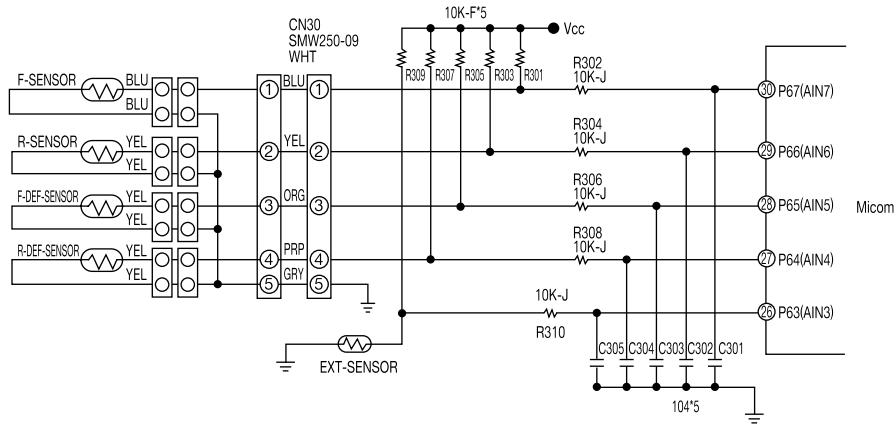

(Air Sensor)

| When Sensor is open | When sensor is cut off |
|---------------------|------------------------|
| MICOM input "HIGH" | MICOM input "LOW" |


- 1) The sensor uses the characteristics of thermistor. If temperature goes higher, resistance goes lower. On the contrary, if temperature goes lower, resistance goes higher.
- 2) A MICOM input voltage is calculated by sensor as follows.

$$V_F = \frac{R_{TH}}{R_{TH} + R_{301}} \times V_{CC} \quad (V_{CC} : 5V, R_{TH} : \text{Sensor resistance})$$


- 3) For the resistance data corresponding to a temperature and a MICOM input voltage, please refer the conversion table on the back.

Circuit Descriptions

10-6) Key Scan and Display Circuit

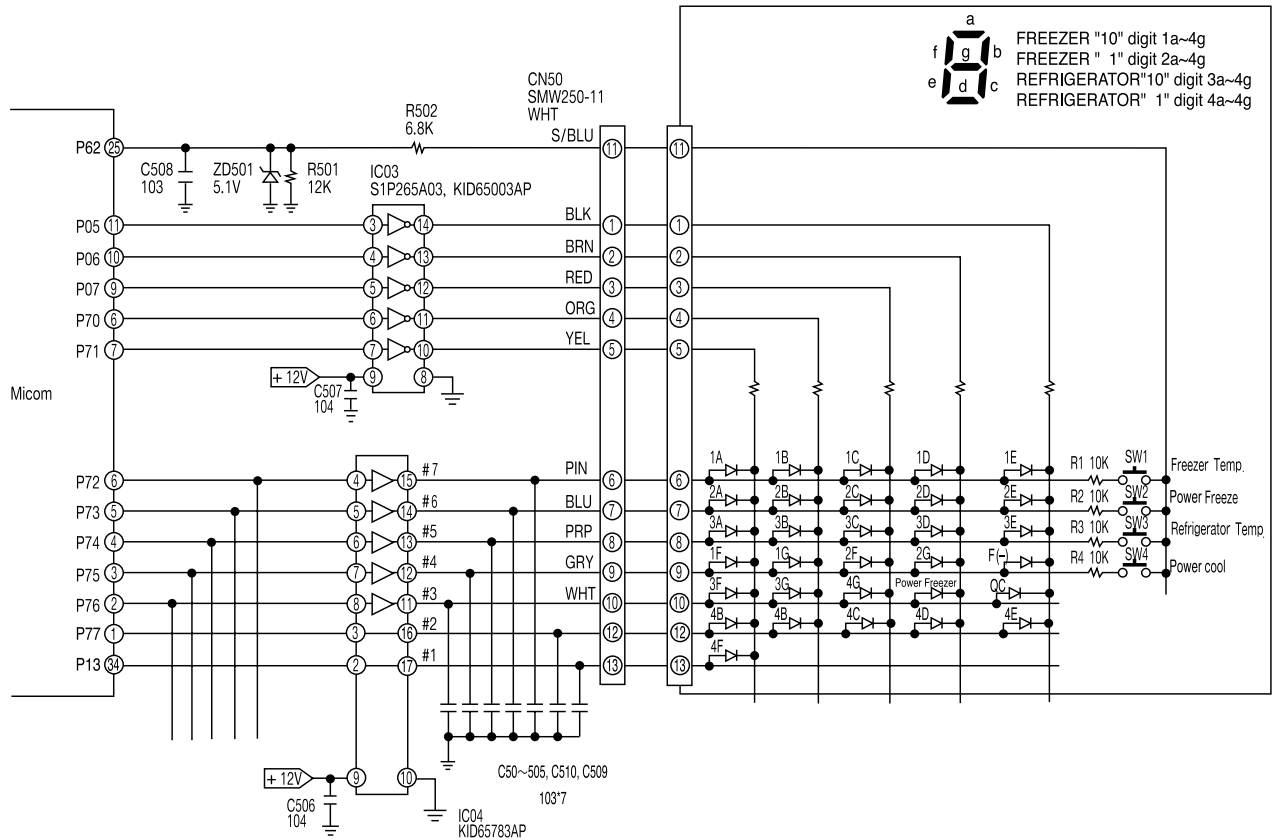


If the IC04 decoder(KID65783AD) receives signals from MLCOM pins(34-6), an output signal per 2 milliseconds comes out from Grid#1-#7. A step DC12 volt peak will be generated periodically as follows:

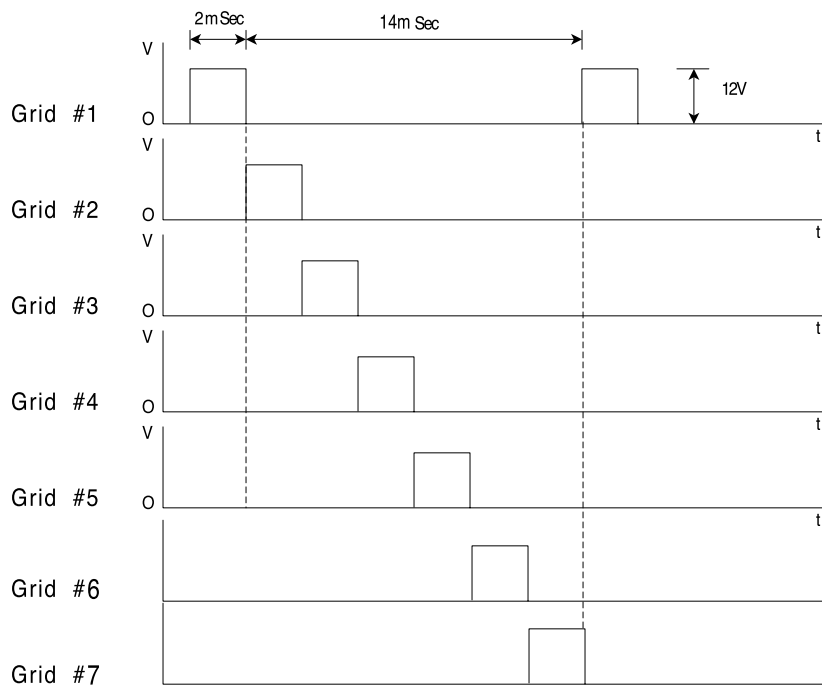

Circuit Descriptions

10-7) Load Drive Circuit

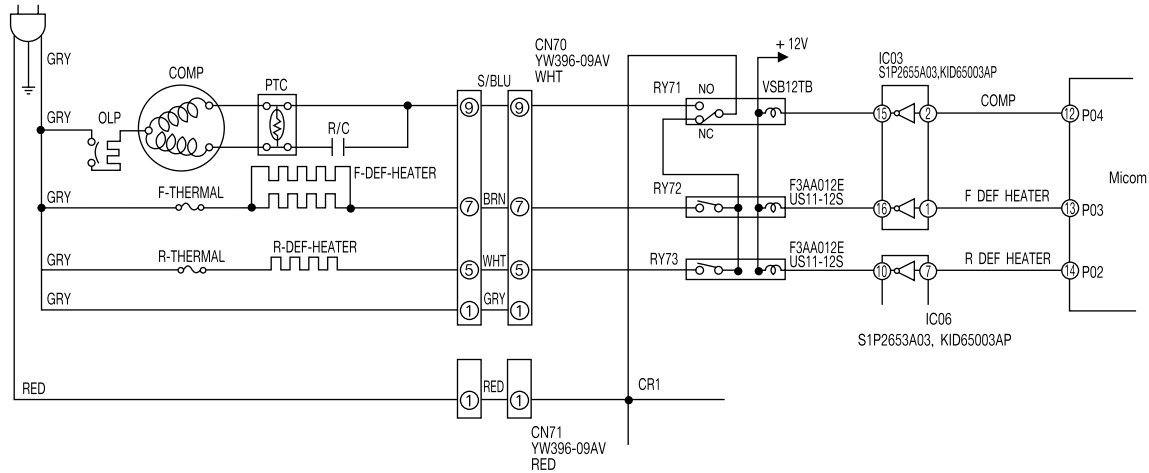


- 1) Most of relays can control the compressor, heaters and several option functions.
- 2) For the compressor, #12 pin of MICOM signals HIGH(5V). This signal enters to #2 of IC03 and #15 of output terminal will be on and grounded. When the relay RY71 is switched to NO terminal a 115V power is supplied to the compressor. If MICOM outputs LOW(0V), the compressor will stop.
- 3) If the RY71 is connected to NC, RY72 and 73 for defrost heaters will be on and corresponding heater.

| RELAY | | Load | Remark |
|-------|----------------|------------------------------|--------------------------|
| COMP | Defrost Heater | | |
| on | off | Comp Operation | Defrost-Heater Power Off |
| on | on | Comp off, Defrost-Heater Off | |
| off | on | Defrost-Heater On | Comp Power Off |
| off | off | Comp Off, Defrost-Heater Off | |

Will be activated according to the signal from MICOM. Like the above block diagram, operation of F, R defrost heater is determined by the operation of the relay for COMP.

Circuit Descriptions

10-8) Option Circuit

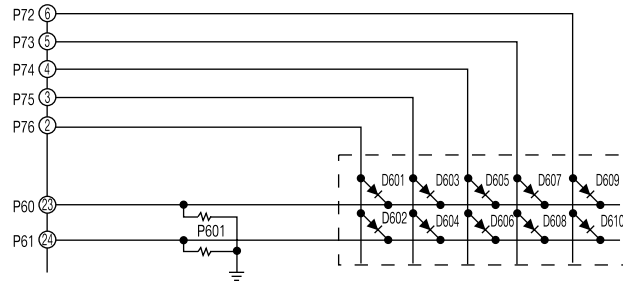

Temperature and function values can be adjustable by using main PCB switching diode.

- Note : the values have been preset in factory. If is recommended not to change the value arbitrarily.
When the option function is modified, a power should be turned off and on, again.


1) Freezer Temperature Shift (Unit °F)

| SHIFT | D601 | D602 | D603 |
|-----------|------|------|------|
| Reference | - | - | - |
| -1.0 | - | - | ● |
| -2.0 | - | ● | - |
| -4.0 | - | ● | ● |
| -6.0 | ● | - | - |
| +2.0 | ● | - | ● |
| +4.0 | ● | ● | - |
| +6.0 | ● | ● | ● |

2) Refrigerator Temperature Shift (Unit °F)

| SHIFT | D604 | D605 | D606 |
|-----------|------|------|------|
| Reference | - | - | - |
| -1.0 | - | - | ● |
| -2.0 | - | ● | - |
| -4.0 | - | ● | ● |
| -6.0 | ● | - | - |
| +2.0 | ● | - | ● |
| +4.0 | ● | ● | - |
| +6.0 | ● | ● | ● |

Circuit Descriptions

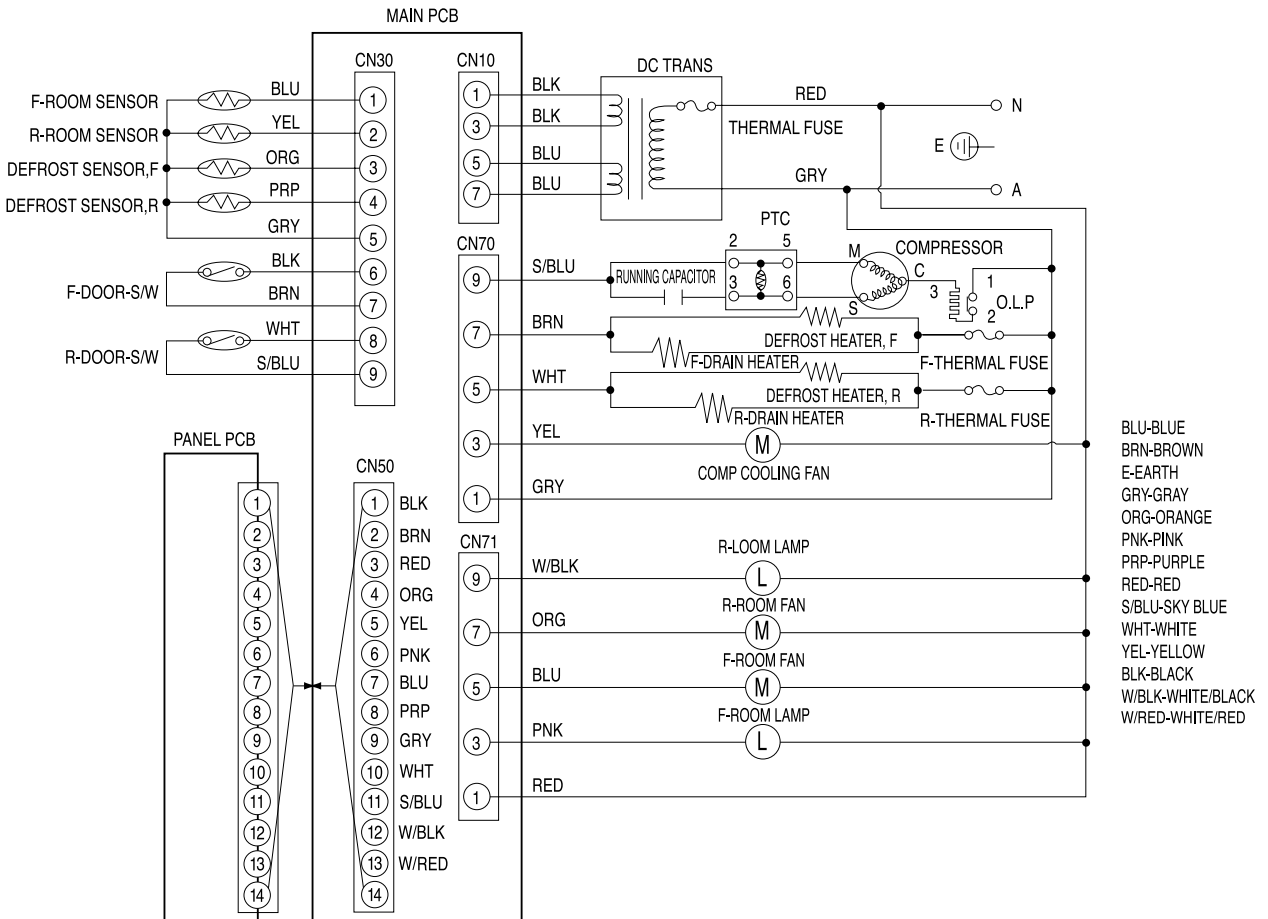


11. Diagnostics

11-1) If power is not ON

Caution!

At the power of main PCB, the 115V power and a high-voltage over DC 170V occur. Special care should be advised on repair and measurement.


To check the main PCB, please apply descriptions of operation and references in the manual.

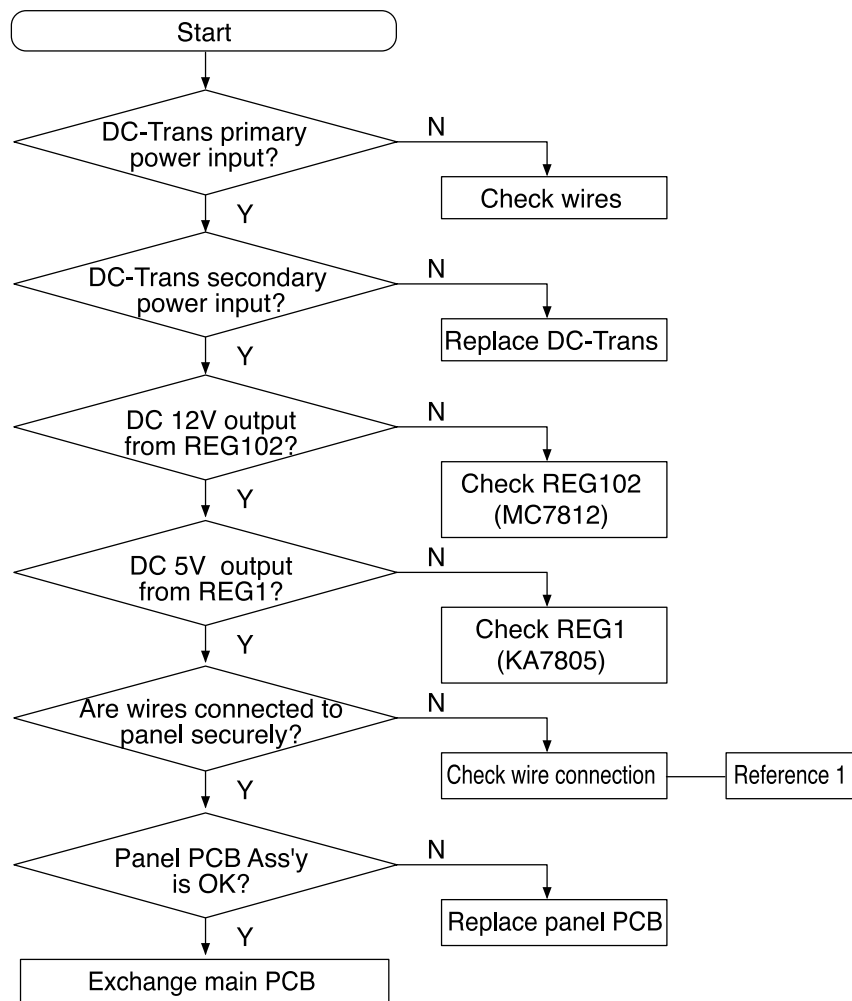


Diagnostics

11-2) If there is a trouble with self-diagnosis

1) If the ambient sensor has trouble.

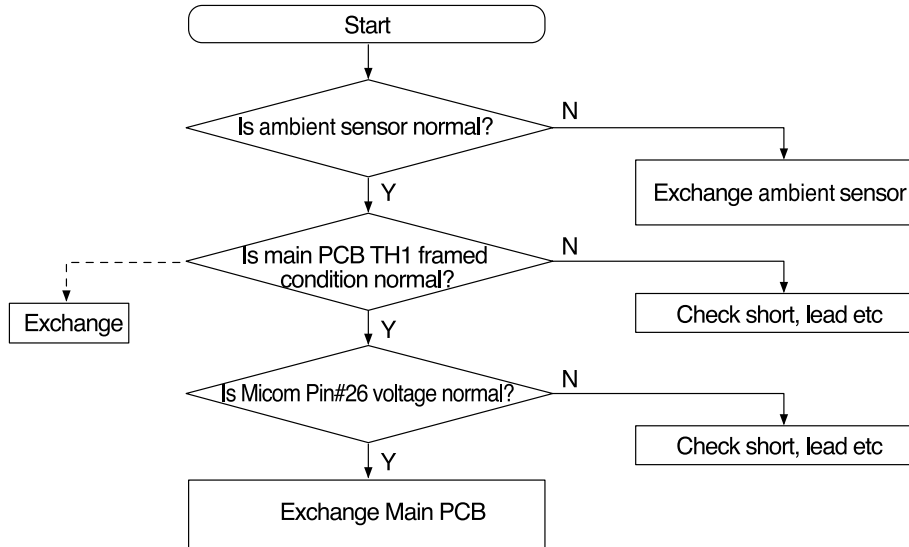


2) If the temperature sensor of the refrigerator has trouble.

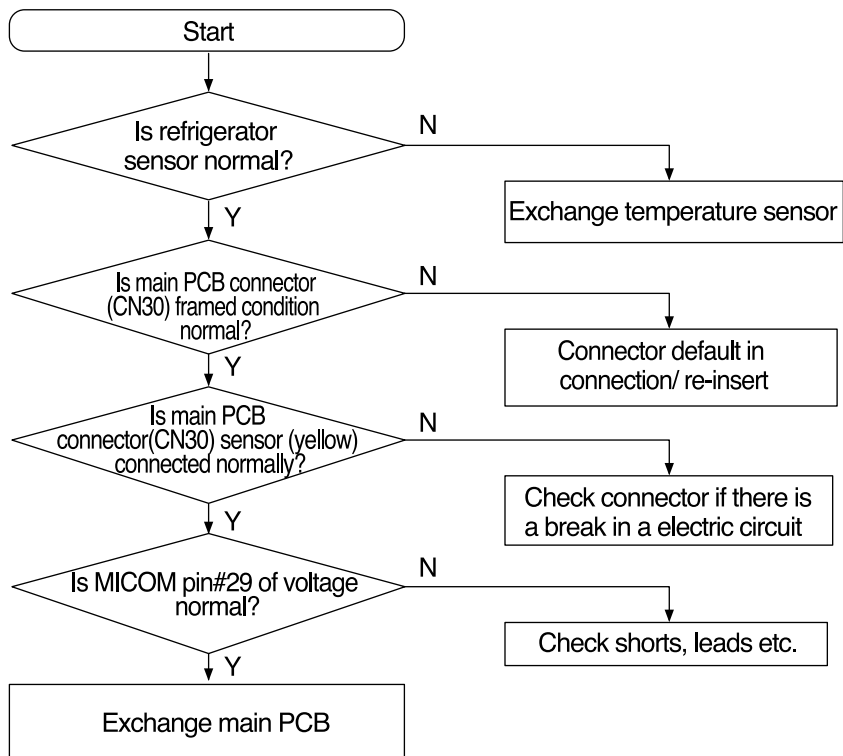


Diagnostics

3) If the defrost sensor of the refrigerator has trouble.

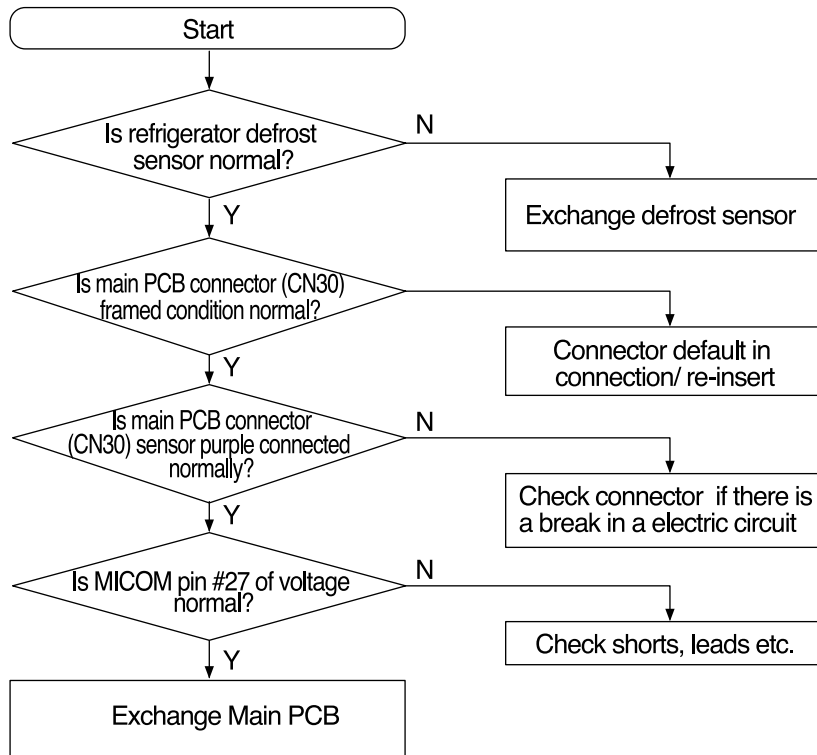


4) If the temperature sensor of the freezer has trouble.

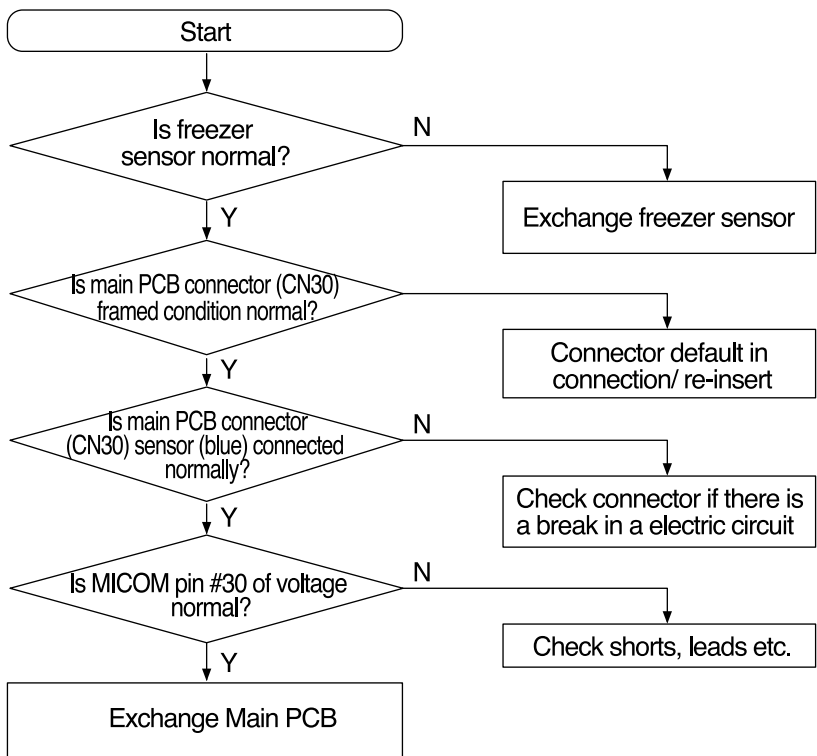

Diagnostics

5) If the defrost sensor of the freezer has trouble.

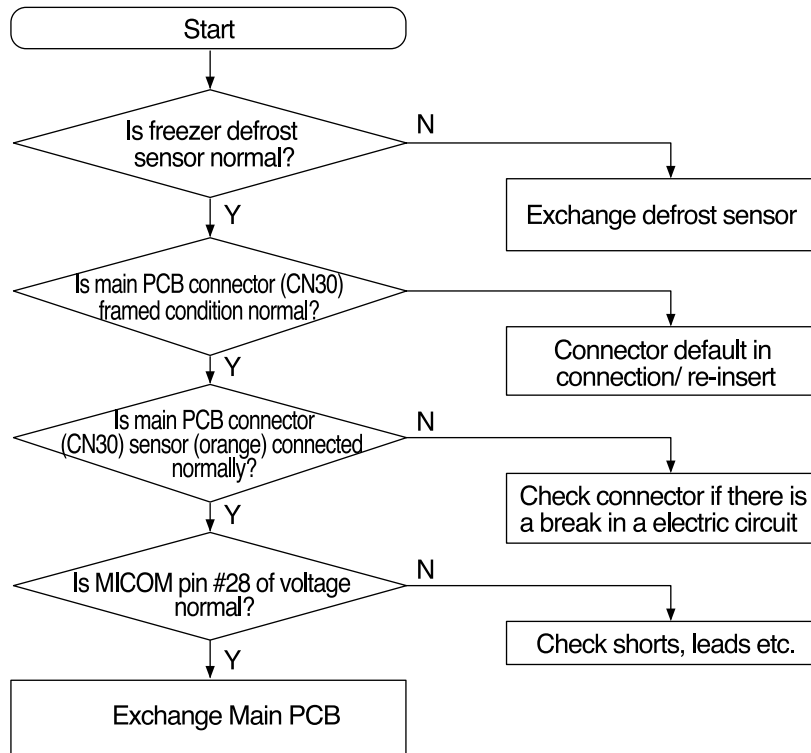


Diagnostics

11-3) If the compressor is not working properly

Pre-check

1. A compressor does not operate within 5 minutes after compressor is OFF.
2. A compressor does not run during defrost period
3. A compressor does not run because a low temperature is detected if freezer and the refrigerator sensor are not connected.

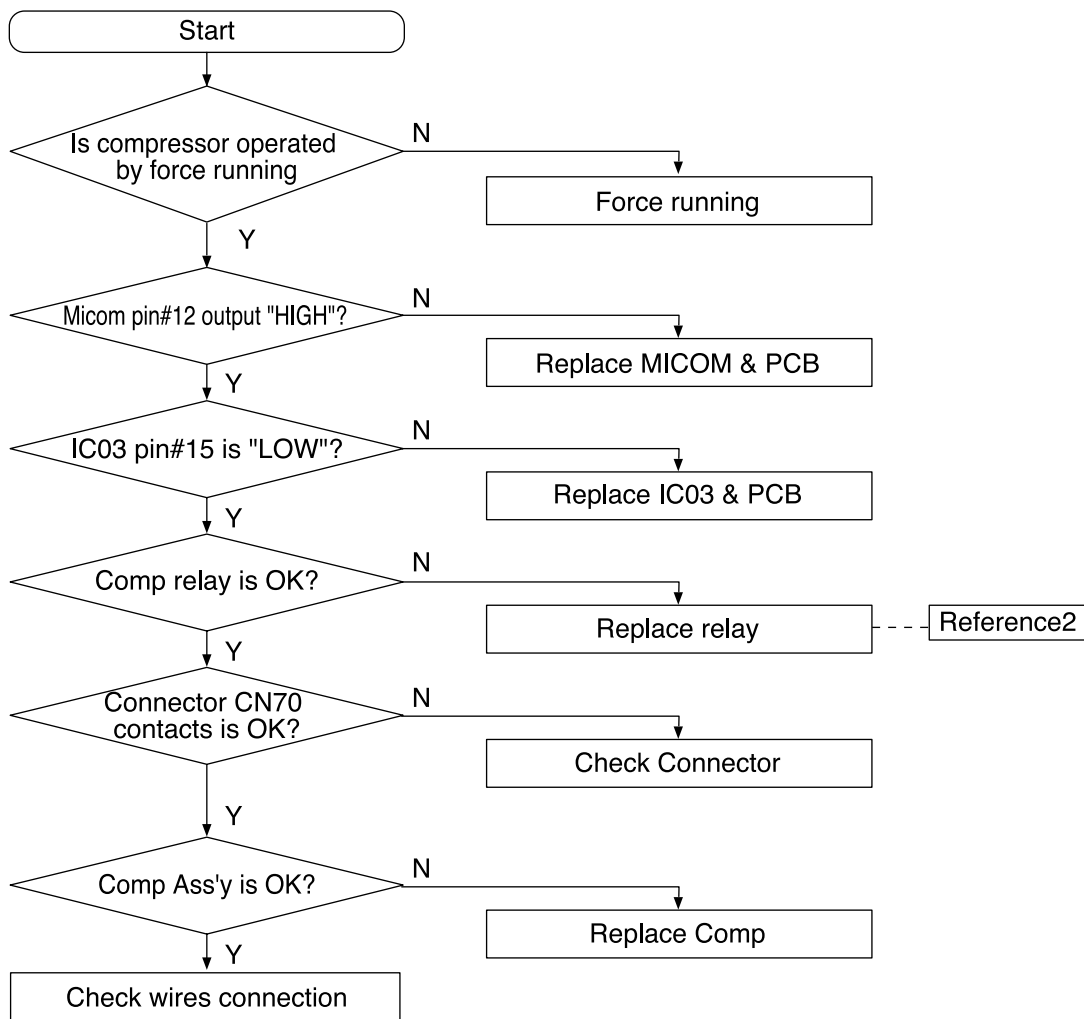

Diagnostics


11-4) If cooling fan doesn't work

Pre-check

Select a pull-down mode from the forced operation function


1. When COMP is OFF both freezer and the refrigerator cooling fans and COMP cooling fan remain OFF.
2. When COMP is ON, the refrigerator fan is not always ON and when the refrigerator temperature reached a set temperature, the fan goes OFF.
3. When both the freezer and the refrigerator doors are closed, each fan has a delay time (5sec ~ 1 min) and then begins to run. (COMP ON condition)

4-1) When freezer fan (F-fan) do not operate

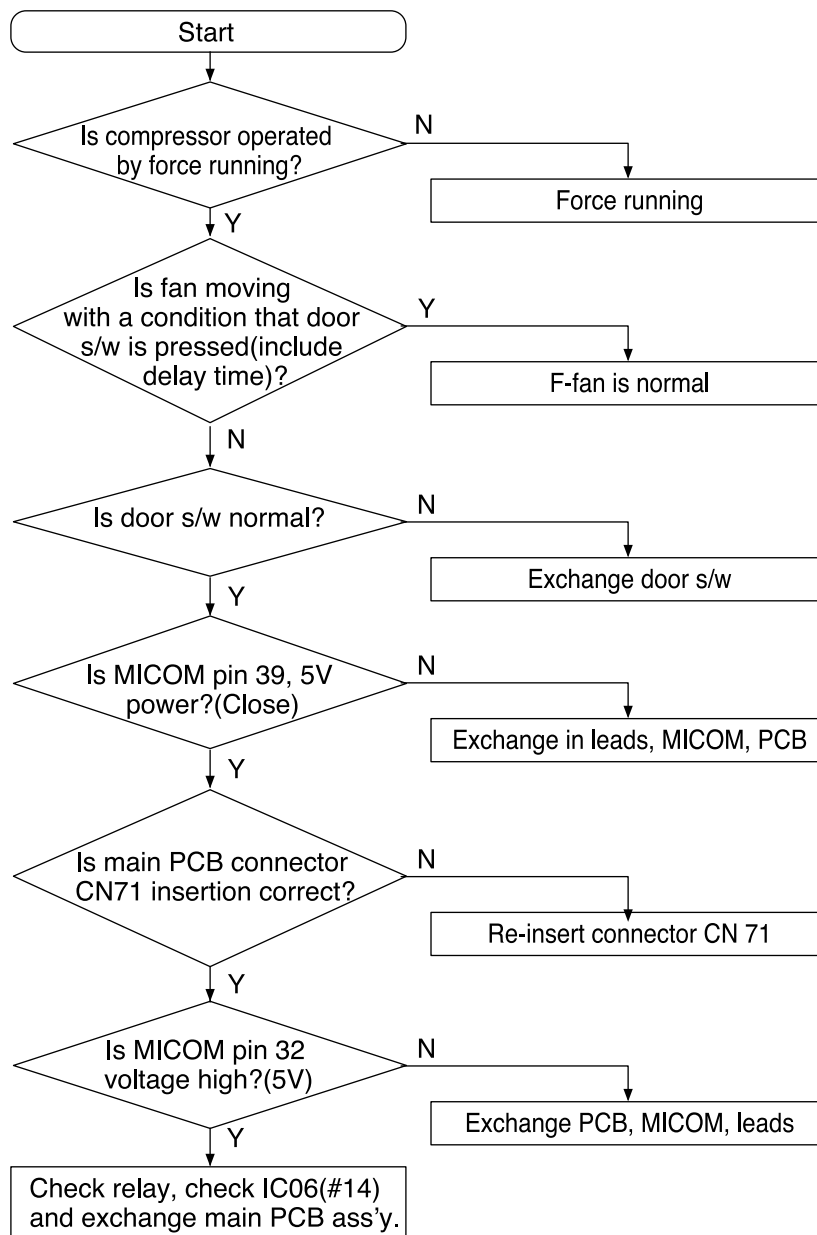


Diagnostics

11-5) If the refrigerator fan doesn't work

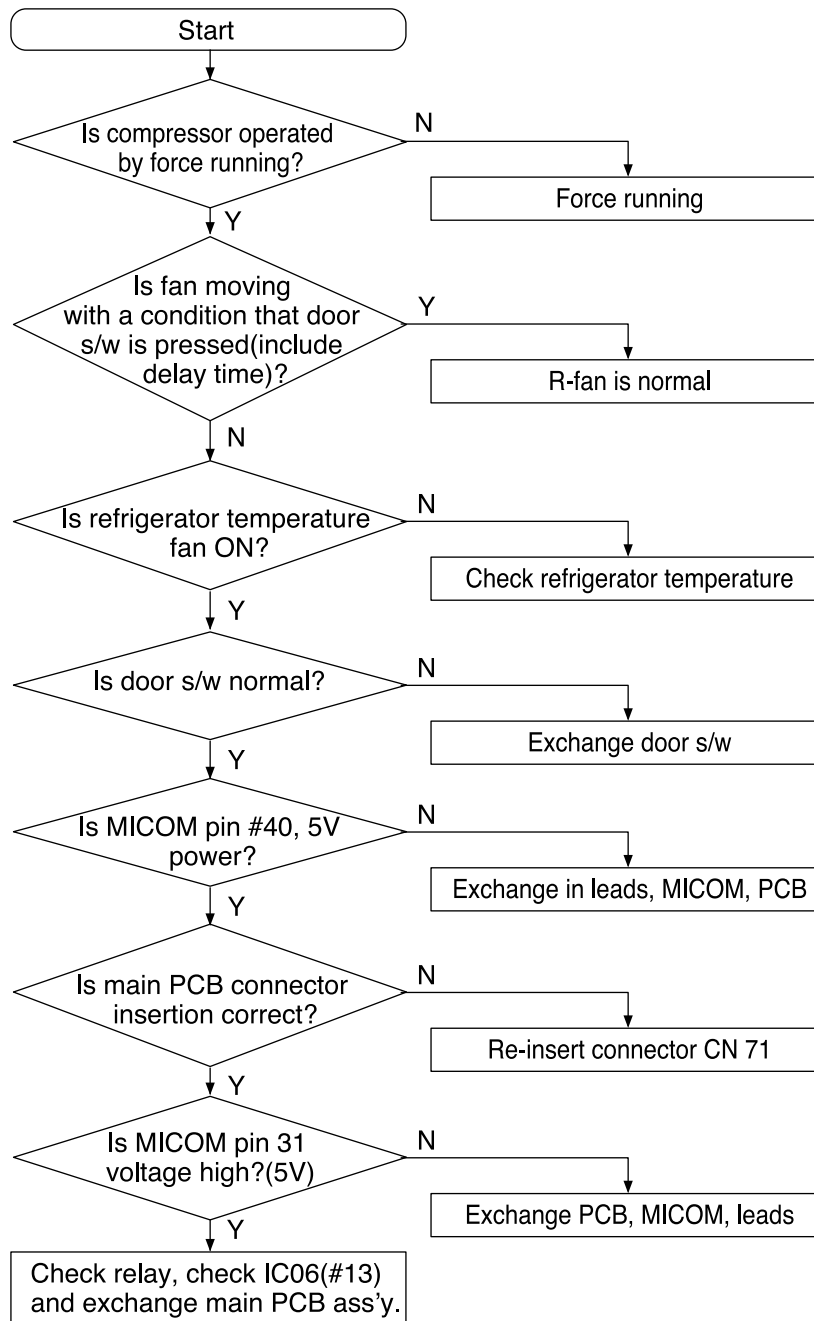

Diagnostics

11-6) If the compressor cooling fan motor doesn't work

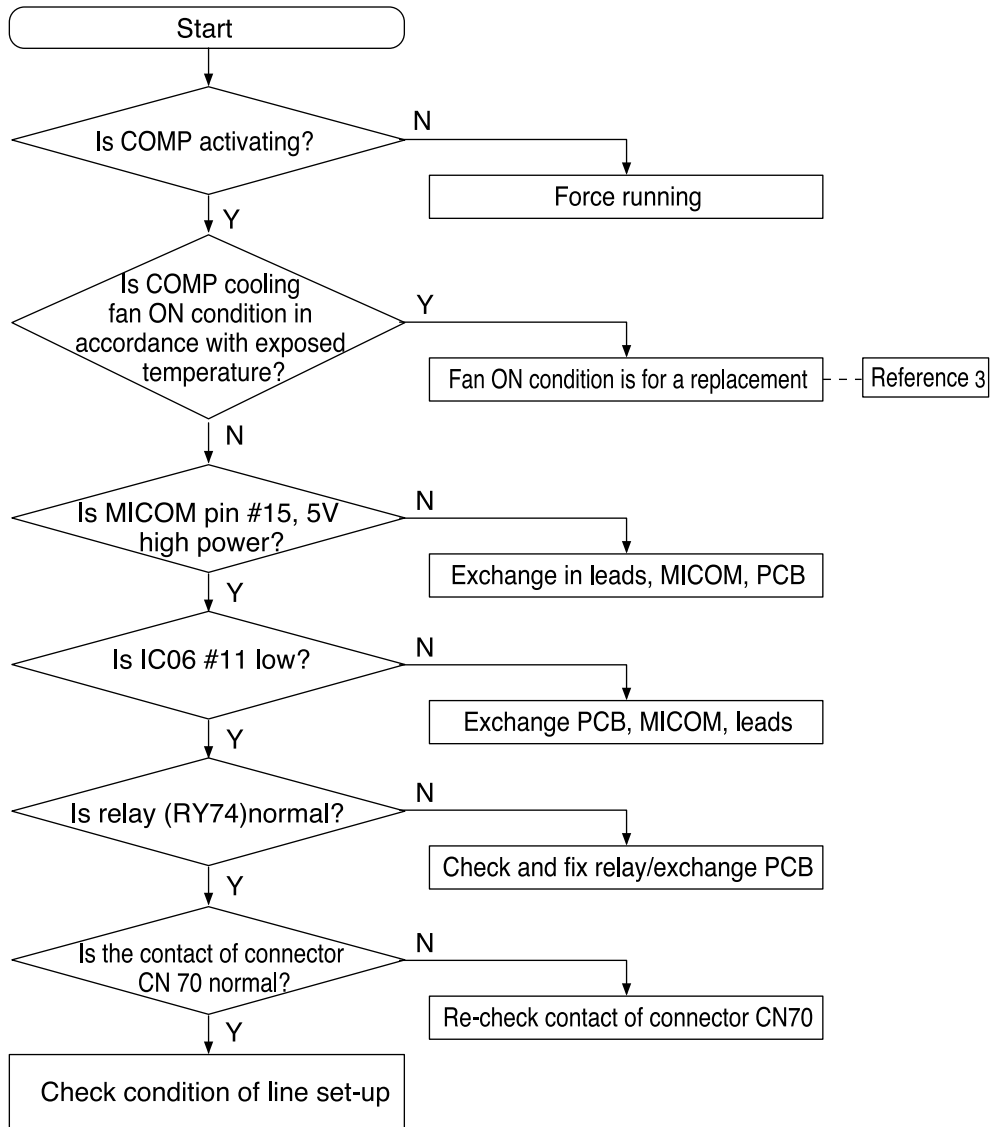


Diagnostics


11-7) No defrosting

Pre-check

1. Although both F • R-defrost sensors have short-circuit, a normal operation continues without a defrost cycle (Refer to self - diagnostics function)
2. When the temperature fuse is open, there is no heating and a defrost occurs naturally by the compartment temperature increase and eventually, it will cause a blinking of temperature.
3. When both F • R-defrost sensors are open, heating does not end. The compressor remains off and a temperature fuse will be open. (Refer to self-diagnostics function.)

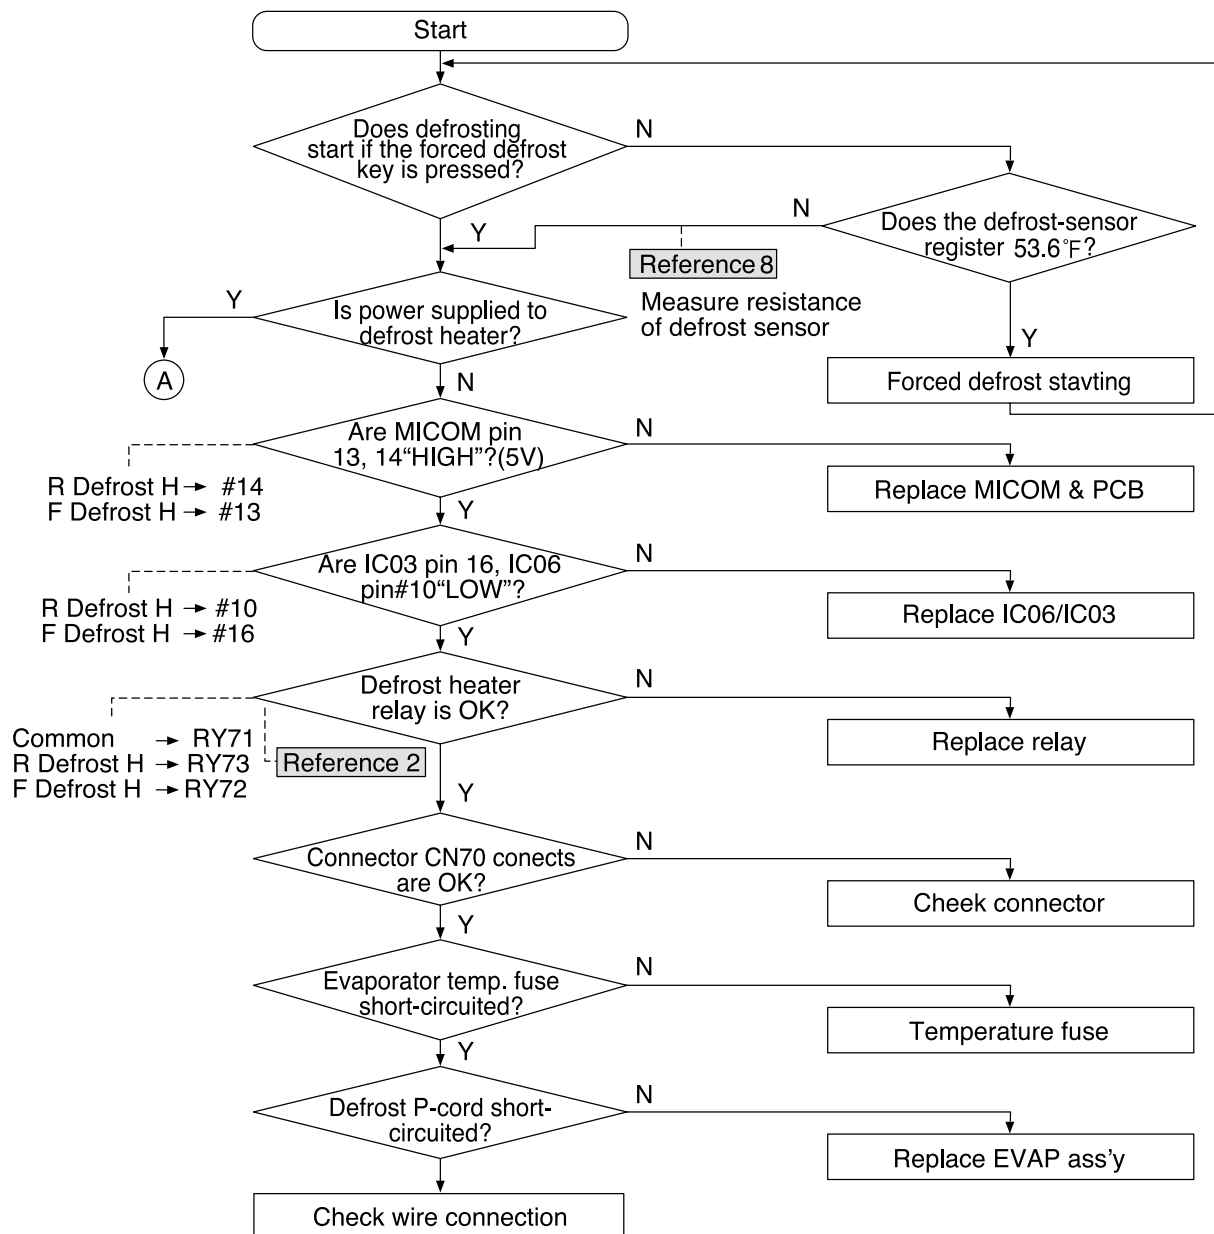

Diagnostics

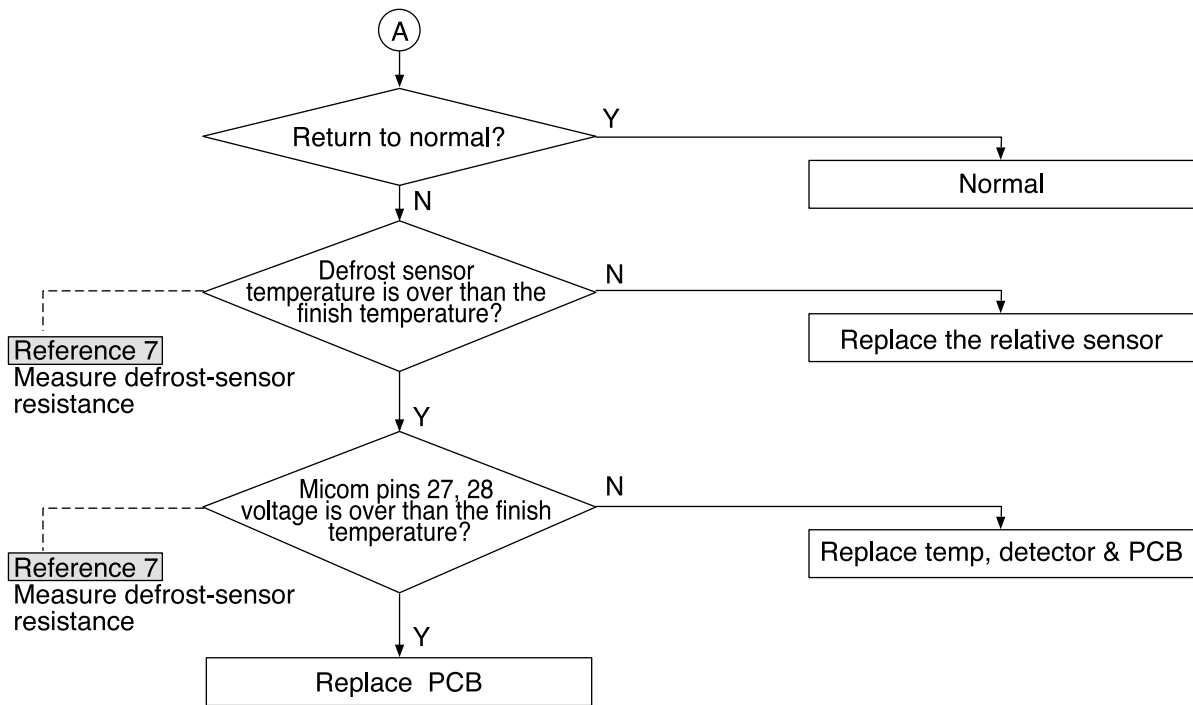


Diagnostics

11-8) Alarm continuously

Pre-check


1. Alarm begins after 2 minutes when the door is open and runs in every 2 minutes.
2. If the door is not closed properly, MICOM will indicate that the door is open, and alarm continues. If the alarm goes for 10 minutes, the light in the compartment will be off and not be on in the situation that the door opens.

1) If melody sounds continuously

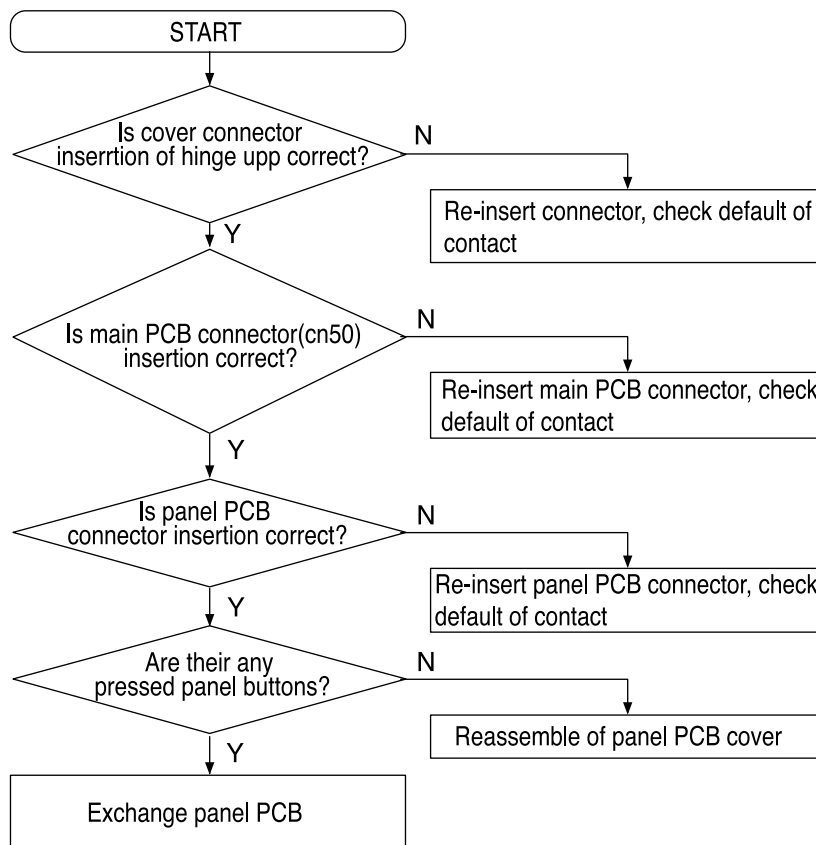


Diagnostics

2) If beep sounds continuously

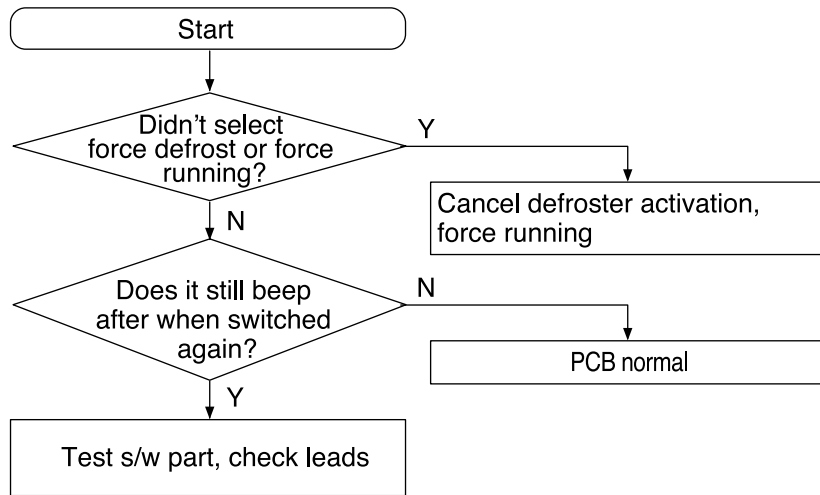


3) When the digital panel PCB does not light

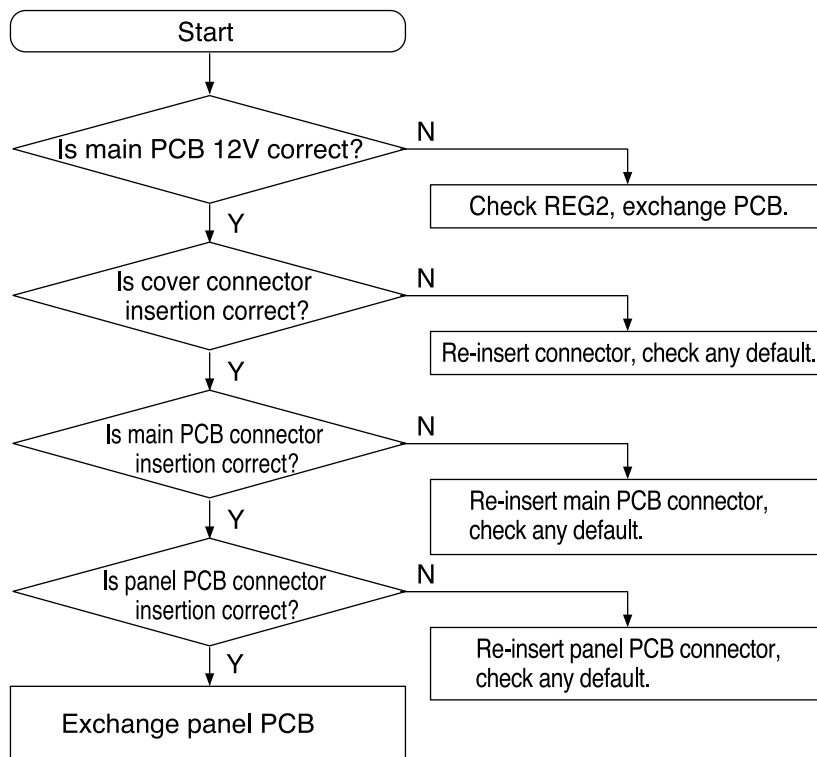

Diagnostics

4) When a button of the digital panel is not selected

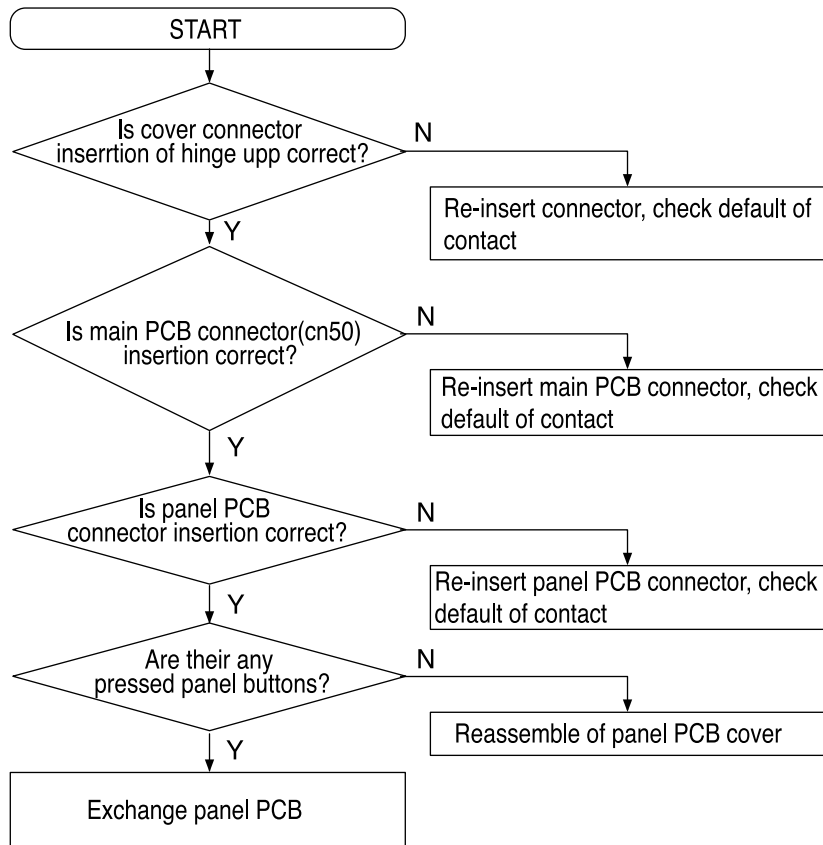


Diagnostics

Pre-check


1. Is the power cord connected to a wall outlet correctly?
2. Be careful of high-voltage, high-frequency discharge from the electronic ballast.

5) If the lamp of refrigerator fails to light

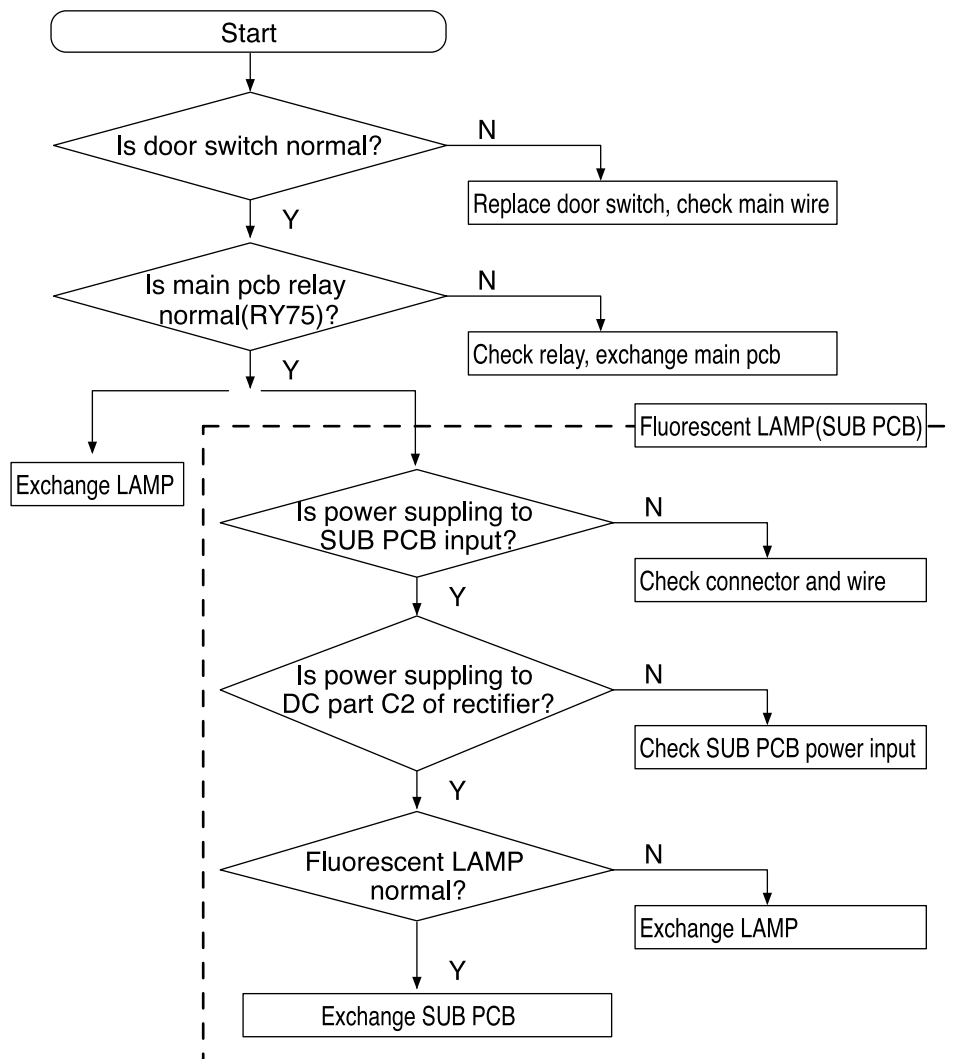

12 . Illustrated Parts Catalog.

12-1) Freezer

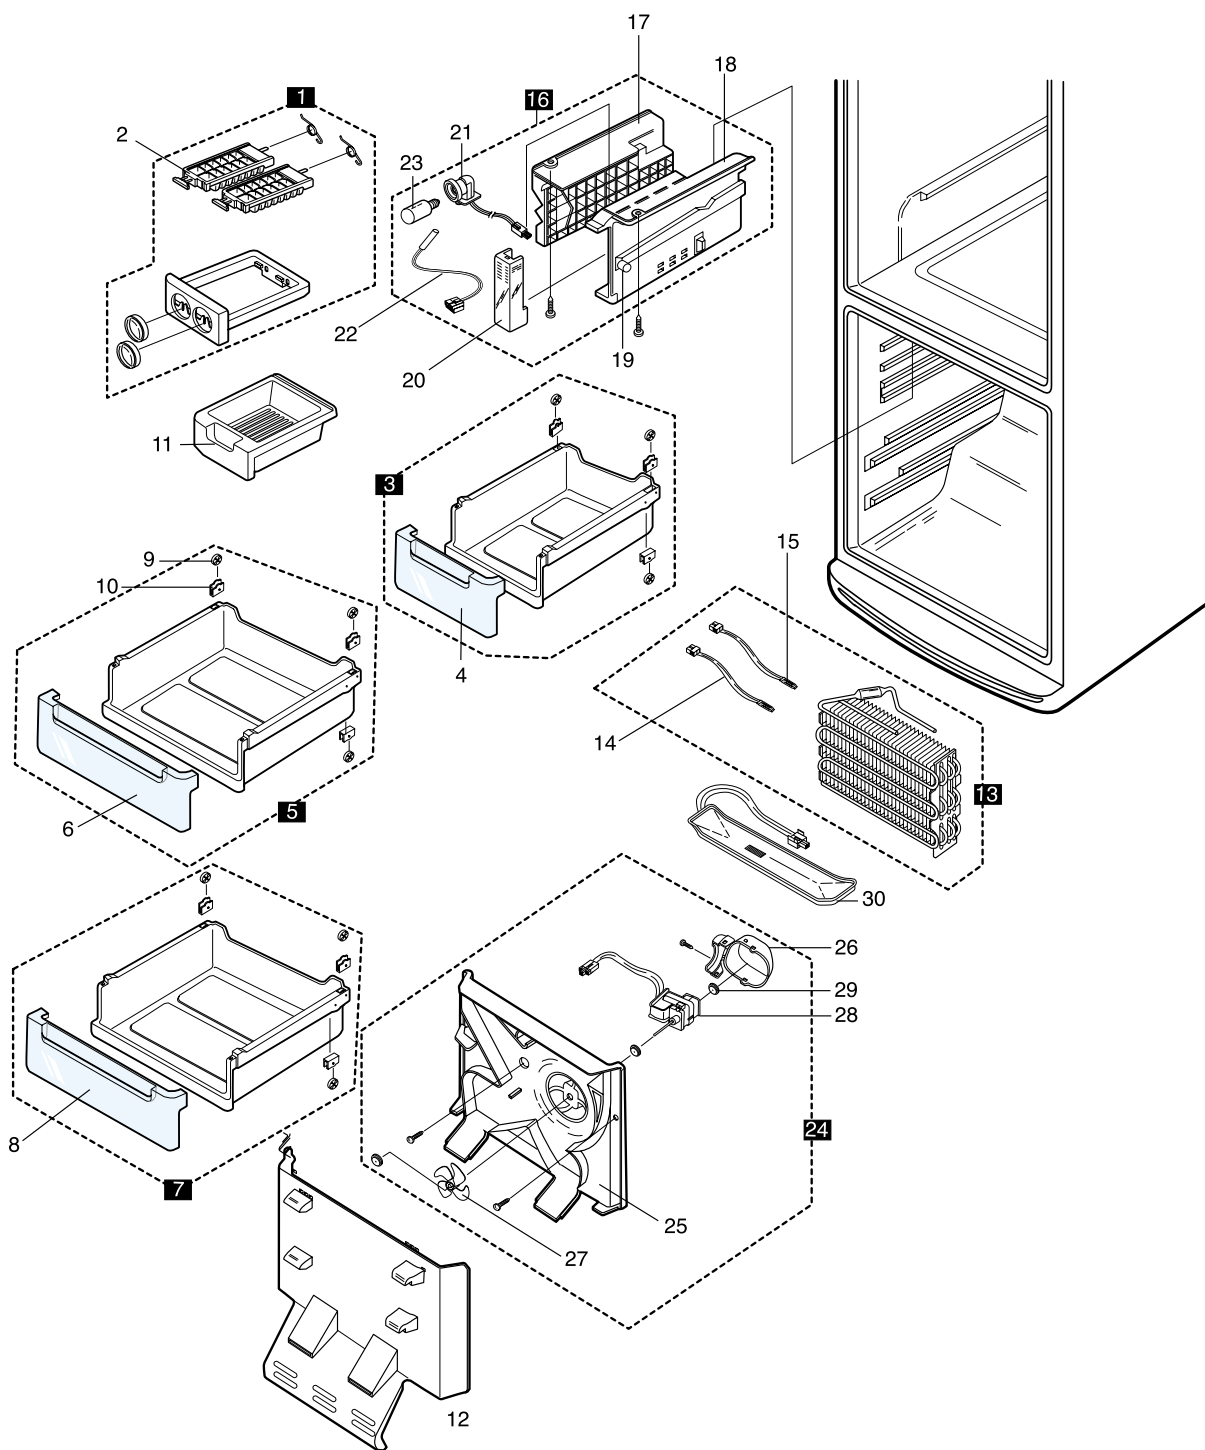


Illustrated Parts Catalog.

■ Parts List of Freezer

| NO | CODE-NO | PART NAME | OPTION | | SPEC |
|----|-------------|-------------------------|--------|--------|----------------|
| | | | RB1955 | RB2155 | |
| 1 | DA67-40203N | TRAY-ICE,ASSY | | | |
| 2 | DA67-40182A | TRAY ICE | | | |
| 3 | DA97-00682A | TRAY-FRE UPP,ASSY | | | |
| | DA97-00682B | TRAY-FRE UPP,ASSY | | | |
| 4 | DA63-01260A | COVER-TRAY FREE, UPP | | | |
| 5 | DA97-00683A | TRAY-FRE MID,ASSY | | | |
| | DA97-00683B | TRAY-FRE MID,ASSY | | | |
| 6 | DA63-01272A | COVER-TRAY FREE, MID | | | |
| 7 | DA97-00684A | TRAY-FRE LOW,ASSY | | | |
| | DA97-00684B | TRAY-FRE LOW,ASSY | | | |
| 8 | DA63-01259A | COVER-TRAY FREE, LOW | | | |
| 9 | DA66-10104A | ROLLER FRE | | | |
| 10 | DA71-20145A | FIXER ROLLER | | | |
| 11 | DA63-00904B | TRAY ICE CUBE | | | |
| | DA63-00922B | TRAY ICE CUBE | | | |
| 12 | DA97-00181A | COVER EVAP FR(FRE),ASSY | | | |
| 13 | DA97-00192F | EVAP-FRE ASSY | | | 115V/242W |
| 14 | DA47-00095E | ASS'Y-FUSE THERMO(77°C) | | | EVAP FRE.250V |
| 15 | DA32-00006C | SENSOR ASSY | | | EVAP FRE |
| 16 | DA97-00122E | ASSY SUPT-FREE | | | 110-130V |
| | DA97-00122F | ASSY SUPT-FREE | | | 110-130V |
| 17 | DA61-70114B | SUPPORT-FREE,L | | | |
| 18 | DA61-70115C | SUPPORT-FREE,R | | | |
| 19 | DA63-40006A | GROMMET RAIL | | | ASSY SUPT-FREE |
| 20 | DA63-00924A | COVER-LAMP,FRE | | | |
| | DA63-00923A | COVER-LAMP,FRE | | | |
| 21 | DA47-00069C | LAMP HOLDER | | | |
| 22 | DA32-10105S | SENSOR ASSY | | | ASSY SUPT FREE |
| 23 | 4713-001035 | LAMP-INCANDESCENT | | | 110-130V/15W |
| 24 | DA97-00390D | COVER-EVAP RE(FRE),ASSY | | | 115V |
| 25 | DA63-00903A | COVER-EVAP REAR | | | |
| 26 | DA61-00081B | CASE-MOTOR | | | |
| 27 | DA31-00019A | FAN-PROPELLER | | | |
| 28 | DA31-00002V | MOTOR-FAN | | | 115V,60HZ |
| 29 | DA63-00771A | GROMMET-FAN MOTOR | | | |
| 30 | DA97-00195D | DRAIN PLATE FRE ASSY | | | 115V/52W |

Illustrated Parts Catalog.

12-2) Refrigerator

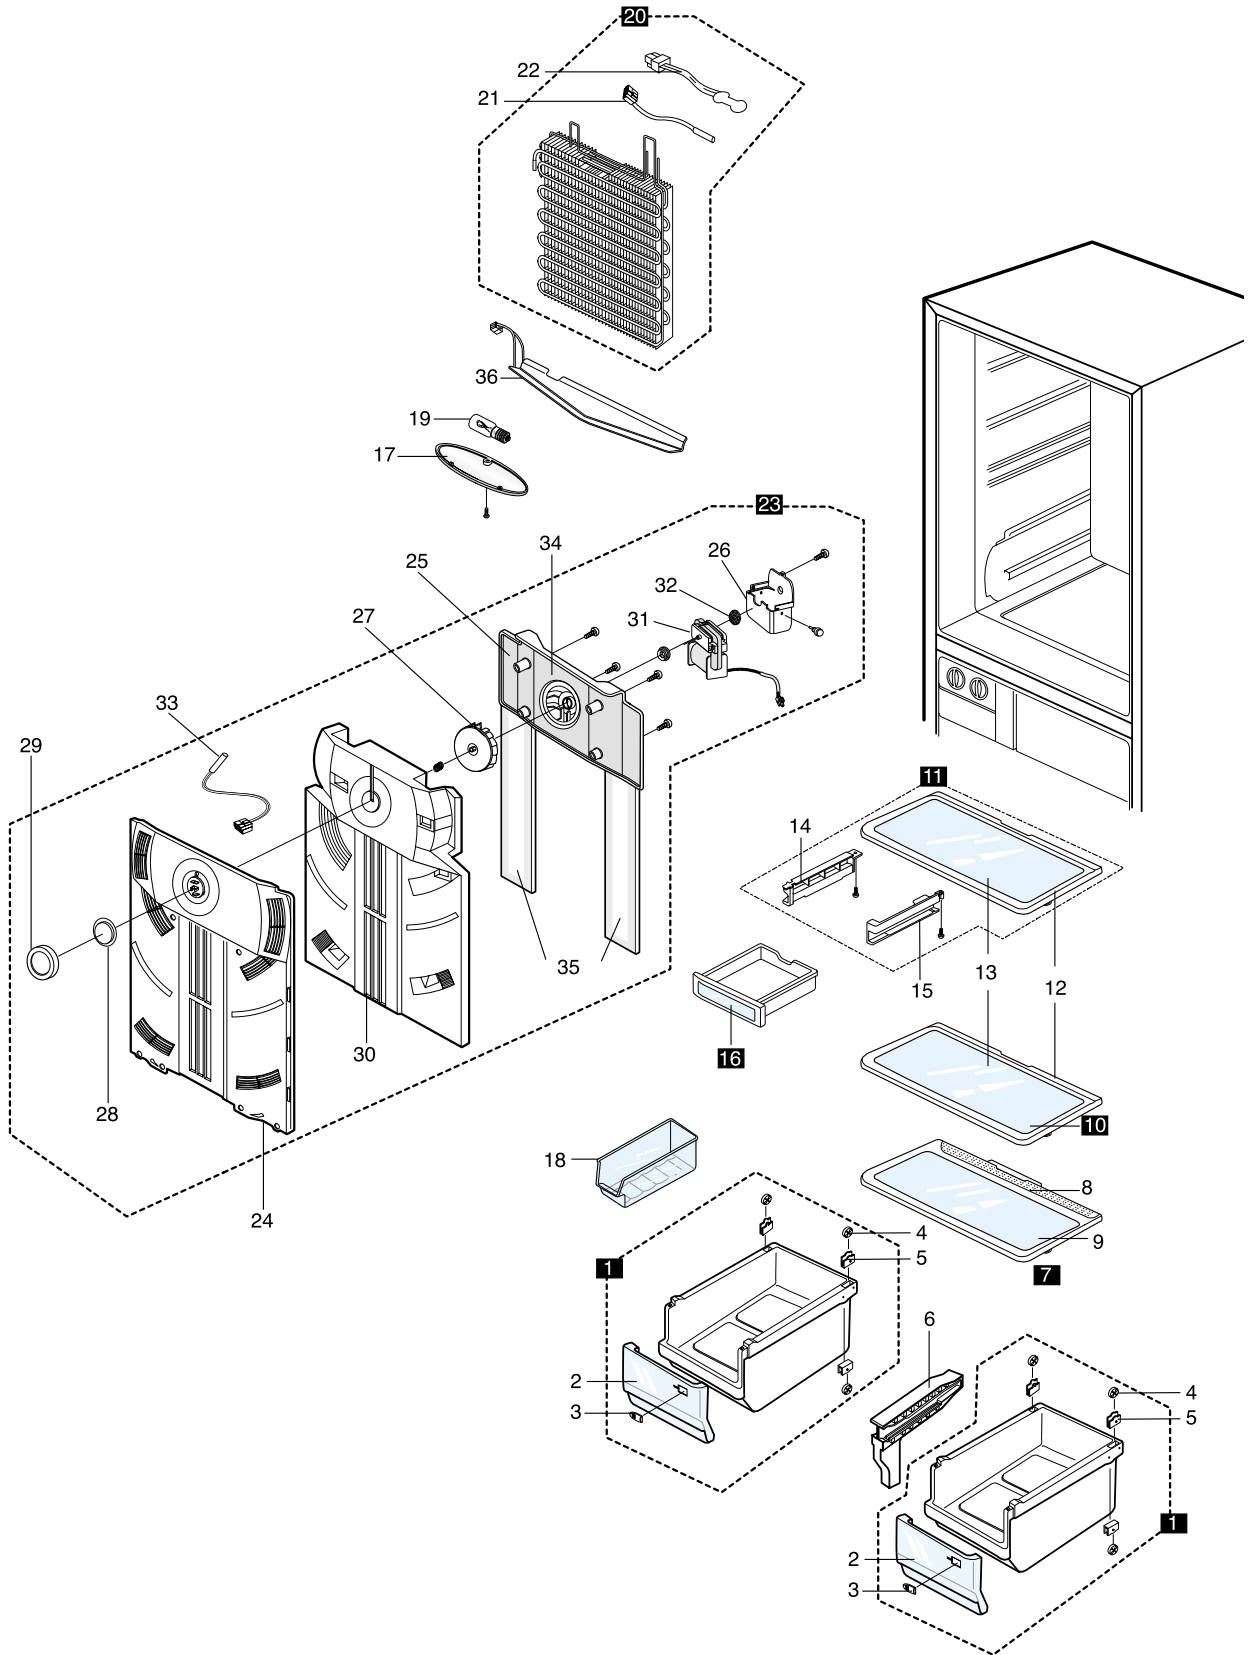


Illustrated Parts Catalog.

■ Parts List of Refrigerator

| NO | CODE-NO | PART NAME | OPTION | | SPEC |
|----|-------------|---------------------------|--------|--------|----------------|
| | | | RB1955 | RB2155 | |
| 1 | DA97-00681A | CASE-VEG,ASSY | | | |
| | DA97-00681B | CASE-VEG,ASSY | | | |
| 2 | DA63-01270A | COVER-VEG | | | |
| 3 | DA64-00656A | KNOB-HUMIDITY | | | |
| 4 | DA66-10104A | ROLLER FRE | | | |
| 5 | DA71-20145A | FIXER ROLLER | | | |
| 6 | DA61-00761A | RAIL-VEG, MID | | | |
| | DA61-00760A | RAIL-VEG, MID | | | |
| 7 | DA97-00663A | COVER-VEG ASSY | | | |
| | DA97-00663B | COVER-VEG ASSY | | | |
| 8 | DA64-00449A | TRIM-COVER,VEG | | | |
| | DA64-00448A | TRIM-COVER,VEG | | | |
| 9 | DA67-00505L | SHELF GLASS | | | COVER VEG |
| | DA67-00505M | SHELF GLASS | | | COVER VEG |
| 10 | DA97-00664A | SHELF REF-MID,ASSY | | | |
| | DA97-00664B | SHELF REF-MID,ASSY | | | |
| 11 | DA97-00664C | SHELF REF-UPP,ASSY | | | |
| | DA97-00664D | SHELF REF-UPP,ASSY | | | |
| 12 | DA64-00450A | TRIM-SHELF REF | | | SHELF(MID/UPP) |
| | DA64-00451A | TRIM-SHELF REF | | | SHELF(MID/UPP) |
| 13 | DA67-00505J | SHELF GLASS | | | SHELF(MID/UPP) |
| | DA67-00505K | SHELF GLASS | | | SHELF(MID/UPP) |
| 14 | DA61-00368A | RAIL-CHILLED,L | | | SHELF-UPP |
| | DA61-00367A | RAIL-CHILLED,L | | | SHELF-UPP |
| 15 | DA61-00370A | RAIL-CHILLED,R | | | SHELF-UPP |
| | DA61-00369A | RAIL-CHILLED,R | | | SHELF-UPP |
| 16 | DA63-00945A | TRAY CHIL ROOM-ASSY | | | |
| | DA97-00296D | TRAY CHIL ROOM-ASSY | | | |
| 17 | DA63-00925A | COVER-LAMP REF | | | |
| 18 | DA67-40250E | TRAY-UTILTY | | | |
| 19 | 4713-001145 | LAMP-INCANDESCENT | | | 130V, 30W |
| 20 | DA96-00017C | EVAP-REF ASSY | | | 115V, 120W |
| 21 | DA32-00006C | SENSOR ASSY | | | EVAP-REF |
| 22 | DA47-00095D | ASSY-FUSE THERMO(R)(77°C) | | | EVAP-REF, 250V |
| 23 | DA97-00459F | COVER-EVAP REF ASSY | | | 115-127V, 60Hz |
| 24 | DA63-00933A | COVER-EVAP FR REF | | | |
| 25 | DA63-00932A | COVER-EVAP RE REF | | | |
| 26 | DA63-00183B | COVER-MOTOR | | | |
| 27 | DA31-00016A | FAN-CIRCUIT | | | |
| 28 | DA63-00934B | COVER-SENSOR REF | | | |
| 29 | DA64-00452C | TRIM-COVER SENSOR | | | |
| 30 | DA60-00033A | SPACER-DUCT | | | 220V-240/50Hz |
| 31 | DA31-00003N | MOTOR-FAN | | | 115V |
| 32 | DA63-00771A | GROMMET-MOTOR | | | |
| 33 | DA32-10105T | SENSOR ASSY | | | COVER EVAP |
| 34 | DA62-00106A | SEAL-COVER EVAP RE | | | |
| 35 | DA62-00109A | SEAL AIR SIDE | | | |
| 36 | DA97-00441B | PLATE-DRAIN REF ASSY | | | 115V/38W |

Illustrated Parts Catalog.

12-3) Disassembly of Door

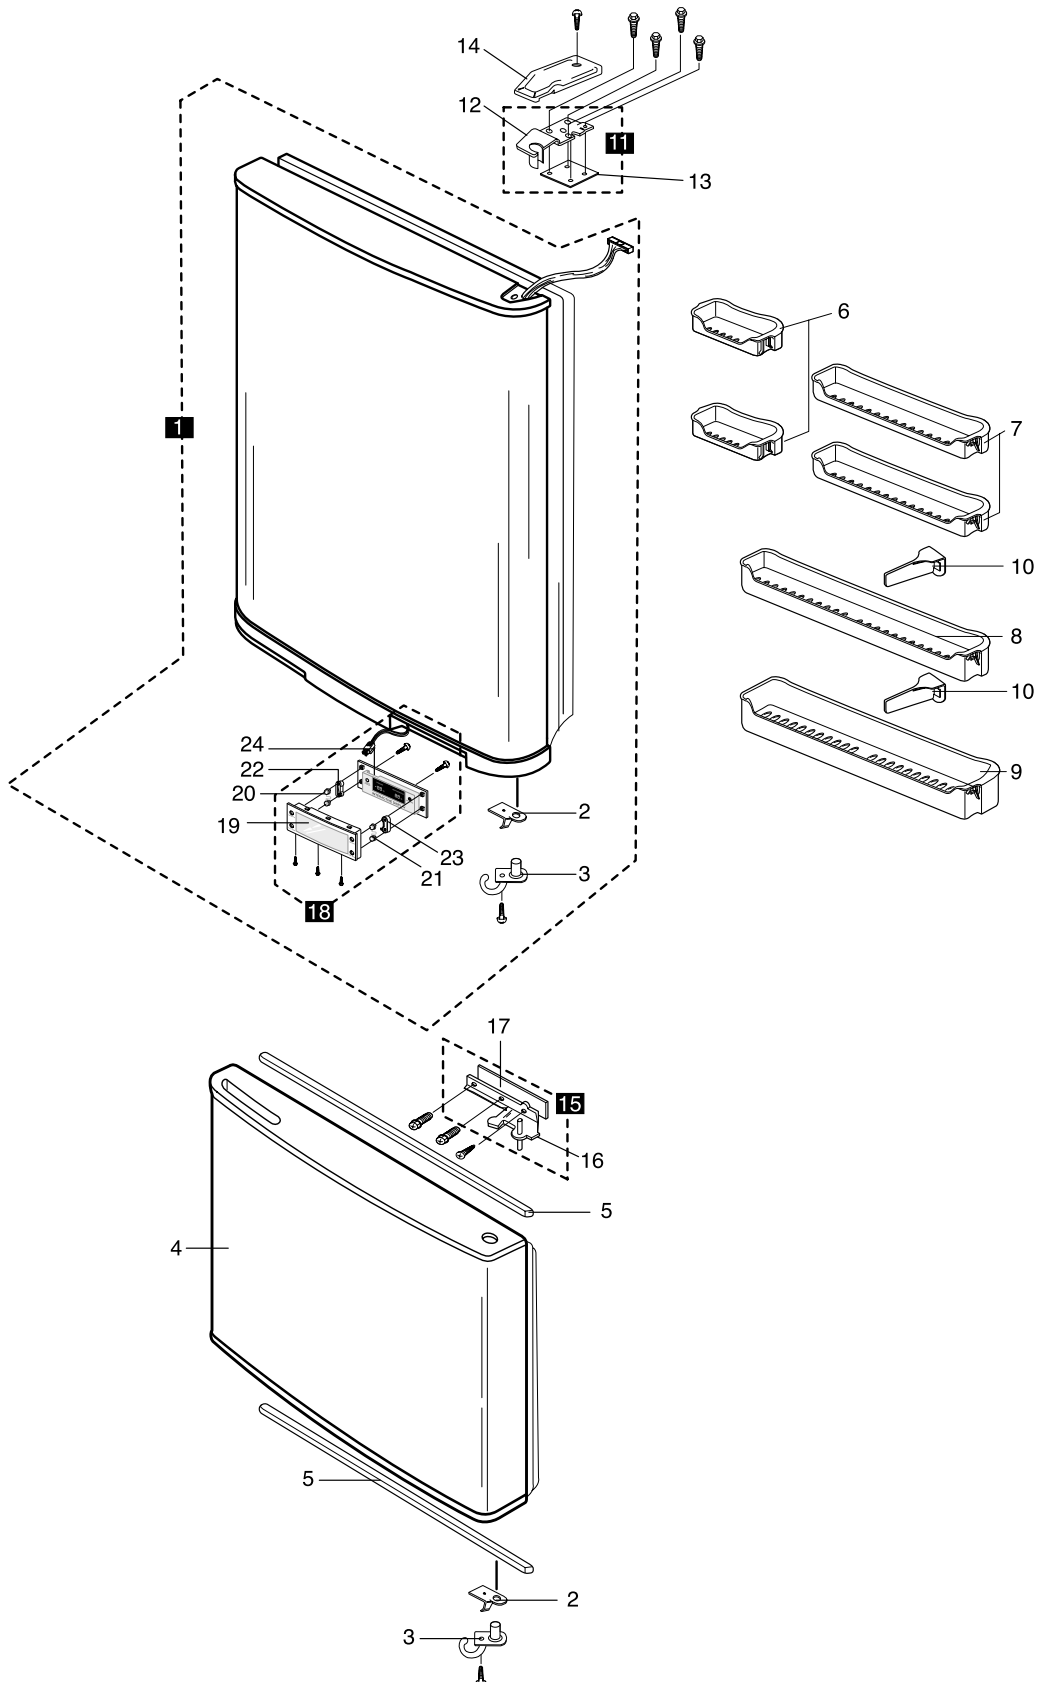


Illustrated Parts Catalog.

■ Parts List of Freezer Door

| | CODE-NO | PART NAME | OPTION | | | | SPEC |
|----|-------------|--------------------------|-----------------|----------|----------|-----------------|--------------------|
| | | | RB1955SW/2155SW | RB1955VQ | RB2155BB | RB1955SH/2155SH | |
| 1 | DA91-01768C | ASSY FOAM-DOOR REF | | | | | SNOW WHITE |
| | DA91-01768D | ASSY FOAM-DOOR REF | | | | | BISQUE |
| | DA91-01768E | ASSY FOAM-DOOR REF | | | | | BLACK |
| | DA91-01768F | ASSY FOAM-DOOR REF | | | | | STAINLESS PLATINUM |
| 2 | DA71-40135A | STOPPER DOOR, MID | | | | | |
| 3 | DA71-40183C | STOPPER DOOR, LOW | | | | | SNOW WHITE |
| | DA71-40183P | STOPPER DOOR, LOW | | | | | BISQUE |
| | DA71-40183Q | STOPPER DOOR, LOW | | | | | BLACK |
| | DA71-40183R | STOPPER DOOR, LOW | | | | | STAINLESS PLATINUM |
| 4 | DA91-01767C | ASSY FOAM-DOOR FRE | | | | | SNOW WHITE |
| | DA91-01767D | ASSY FOAM-DOOR FRE | | | | | BISQUE |
| | DA91-01767E | ASSY FOAM-DOOR FRE | | | | | BLACK |
| | DA91-01767F | ASSY FOAM-DOOR FRE | | | | | STAINLESS PLATINUM |
| 5 | DA63-01052A | GASKET-DOOR SUB FRE | | | | | |
| 6 | DA63-00926B | GUARD-REF UPP, L | | | | | |
| 7 | DA63-00927B | GUARD-REF UPP, R | | | | | |
| 8 | DA63-01262A | GUARD-REF MID | | | | | |
| 9 | DA63-01263A | GUARD-REF LOW | | | | | |
| 10 | DA61-00365B | GUIDE-BOTTLE | | | | | |
| 11 | DA61-00378A | HINGE-UPP ASSY | | | | | |
| 12 | DA61-00361A | HINGE-UPP | | | | | |
| 13 | DA63-50145A | SHIM-HINGE UPP | | | | | |
| 14 | DA67-00546A | CAP HINGE UPP | | | | | SNOW WHITE |
| | DA67-00546G | CAP HINGE UPP | | | | | BISQUE |
| | DA67-00546H | CAP HINGE UPP | | | | | BLACK |
| | DA67-00546J | CAP HINGE UPP | | | | | STAINLESS PLATINUM |
| 15 | DA61-10153E | HINGE-MID, ASSY | | | | | |
| 16 | DA61-10142C | HINGE-MID | | | | | |
| 17 | DA63-50139C | SHIM-HINGE MID | | | | | |
| 18 | DA97-00352X | ASSY COVER CONTROL PANEL | | | | | SNOW WHITE |
| | DA97-00352Y | ASSY COVER CONTROL PANEL | | | | | BISQUE |
| | DA97-00352Z | ASSY COVER CONTROL PANEL | | | | | BLACK |
| | DA97-00352W | ASSY COVER CONTROL PANEL | | | | | STAINLESS PLATINUM |
| 19 | DA63-00909F | COVER CONTROL PANEL | | | | | SNOW WHITE |
| | DA63-00909J | COVER CONTROL PANEL | | | | | BISQUE |
| | DA63-00909K | COVER CONTROL PANEL | | | | | BLACK |
| | DA63-00909L | COVER CONTROL PANEL | | | | | STAINLESS PLATINUM |
| 20 | DA64-00444A | BUTTON-PCB, L | | | | | SILVER |
| 21 | DA64-00445A | BUTTON-PCB, R | | | | | SIVLER |
| 22 | DA63-00915A | GASKET BUTTON PCB, L | | | | | |
| 23 | DA63-00916A | GASKET BUTTON PCB, R | | | | | |
| 24 | DA41-00225A | PANEL PCB | | | | | |

Illustrated Parts Catalog.

12-4) Cabinet

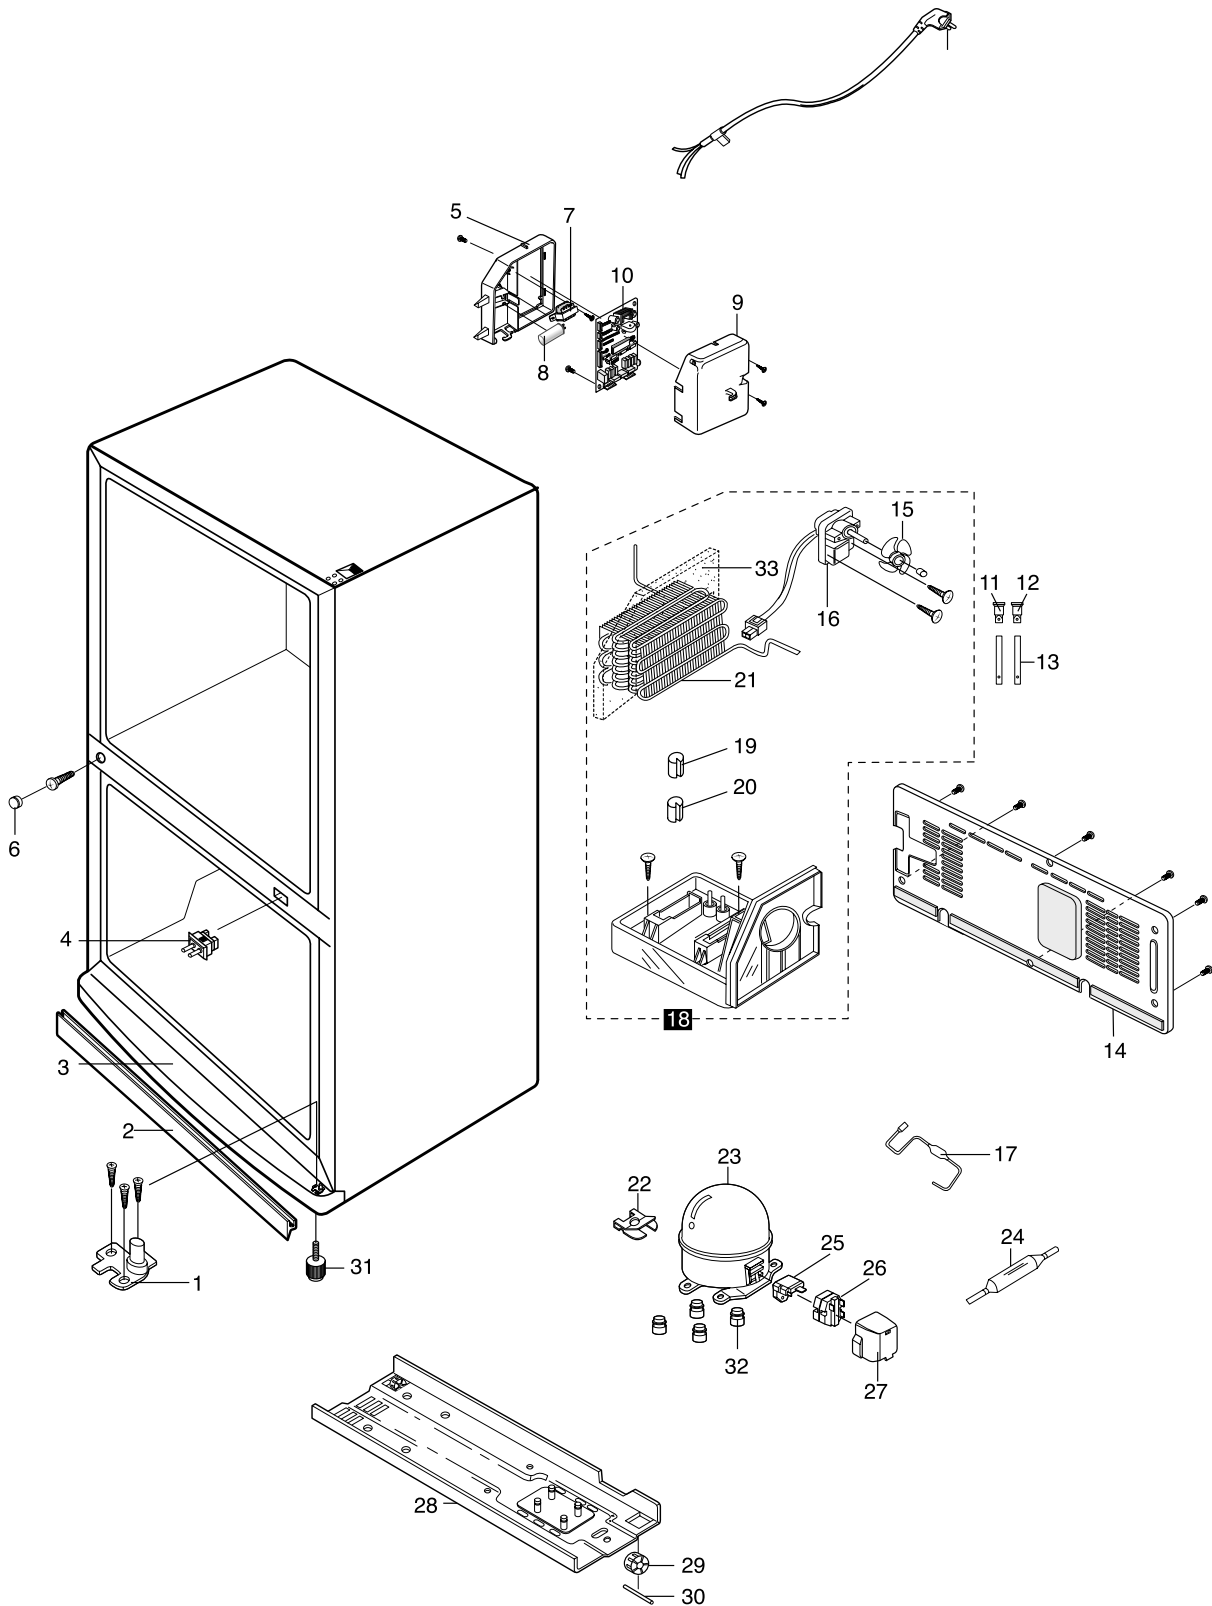

Illustrated Parts Catalog.

■ Parts List of Cabinet


| | CODE-NO | PART NAME | OPTION | | | | SPEC |
|----|-------------|-----------------------|-----------------|----------|----------|-----------------|--------------------|
| | | | RB1955SW/2155SW | RB1955VQ | RB2155BB | RB1955SH/2155SH | |
| 1 | DA61-10145D | HINGE-LOW | | | | | |
| 2 | DA64-20138B | TRIM-PLATE, ABSORBER | | | | | |
| 3 | DA63-10262F | COVER-LEG | | | | | SNOW WHITE |
| | DA63-10262R | COVER-LEG | | | | | BISQUE |
| | DA63-10262S | COVER-LEG | | | | | BLACK |
| | DA63-10262T | COVER-LEG | | | | | STAINLESS PLATINUM |
| 4 | DA34-00122D | SWITCH DOOR | | | | | |
| 5 | DA61-00758A | CASE-PCB PANEL | | | | | |
| 6 | DA67-30218R | CAP-SCREW | | | | | SNOW WHITE |
| | DA67-00322M | CAP-SCREW | | | | | BISQUE |
| | DA67-00322N | CAP-SCREW | | | | | BLACK |
| | DA67-00322G | CAP-SCREW | | | | | STAINLESS PLATINUM |
| 7 | DA26-30111J | TRANS POWER | | | | | |
| 8 | 2501-001045 | C-OIL | | | | | 115V |
| 9 | DA63-01271A | COVER-PCB PANEL | | | | | 250V, 12uF |
| 10 | DA41-00128D | PBA-MAIN | | | | | |
| 11 | DA63-00951A | GROMMET-DRAIN HOSE, A | | | | | 115V |
| 12 | DA63-00951B | GROMMET-DRAIN HOSE, B | | | | | REF(C10) |
| 13 | DA62-20001Q | TUBE-PVC | | | | | FRE |
| 14 | DA97-00408B | COVER-COMP ASSY | | | | | |
| 15 | DA31-00010B | FAN-ASY | | | | | |
| 16 | DA31-10110G | MOTOR-CIRCUIT | | | | | |
| 17 | DA73-10109A | PIPE-CONNECT | | | | | 115V/60Hz |
| 18 | DA97-00180N | TRAY-DRAIN WATER ASSY | | | | | 115V |
| 19 | DA63-40171B | GROMMET-SUCT PIPE, A | | | | | PIPE-SUB COMA |
| 20 | DA63-40171D | GROMMET-SUCT PIPE, B | | | | | PIPE-SUCT |
| 21 | DA73-10314L | PIPE-SUB COND ASSY | | | | | |
| 22 | DA65-20101B | CLAMP-COMP | | | | | R134a |
| 23 | MK172C-L2U | COMPRESSOR | | | | | |
| 24 | DA73-30102B | DRYER-ASSY | | | | | 4TM437RHBYY-53 |
| 25 | DA34-10003D | PROTECTOR O/L | | | | | J531Q33E100M200-2 |
| 26 | DA35-10013N | RELAY-PTC | | | | | |
| 27 | DA63-10352A | COVER RELAY | | | | | |
| 28 | DA71-60141D | CHASSIS-COMP ASSY | | | | | |
| 29 | DA61-40101C | CASTER-REAR | | | | | |
| 30 | DA60-90124A | RIVET-CASTER | | | | | |
| 31 | DA61-00178A | LEG-ASSY | | | | | |
| 32 | DA63-40004A | GROMMET COMP | | | | | |
| 33 | DA62-00217A | SEAL-SUB COND | | | | | |

13. Safety Instructions on Service


- Unplug the refrigerator before making any repair or any replacement.
 - ⇒ Avoid the electric shock.
- Use the rated components on the replacement.
 - ⇒ Check the correct model number, rated voltage, rated current, operating temperature and so on.
- On repair, be sure that the wires such as harness are bundled tightly and are not exposed by water.
 - ⇒ Bundle wires tightly in order not to be detached by the external force.
- On repair, remove completely dust, particles or other things on housing parts, harness parts, and connectors.
 - ⇒ Cleaning may prevent fire by tracking or short.
- Check if there is any trace indicating the infiltration of water on electrical parts.
 - ⇒ If there is a trace, change the related components or do the necessary action such as taping using the insulating tape.
- After repair, check the assembled state of parts.
 - ⇒ It must be the same assembled state as before.
- Check the surrounding conditions of the installed refrigerator.
 - ⇒ When the refrigerator is located at humid or wet place, or the installed state is unstable, change the location.
- If needed, do the ground.
 - ⇒ Especially, if there is a possibility of the electric leakage, this appliance must be properly grounded.
- Do not allow consumers to use one outlet for several plugs.
- Check if the power cord is placed under other appliance and so was damaged, worm-out and squeezed.
 - ⇒ Repair defective power plug or outlet immediately.
 - ⇒ Make sure that the power cord is not placed under other appliance or squeezed.
- Do not allow consumers to keep bottles or the likes in the Freezer or to keep foods in unstable position.
- Do not allow consumers to repair the appliance by themselves.
- Do not allow consumers to keep other chemicals except food.
 - ⇒ Medicines and other materials for research ; This appliance will not maintain the precisely constant temperature for them.
 - ⇒ Volatile material(Alcohol, Benzene, Ether, LP gas etc.) : possibility of explosion

Appendix I (Reference for circuit diagnostics)

Ref.1) Wire connector on the cabinet door.

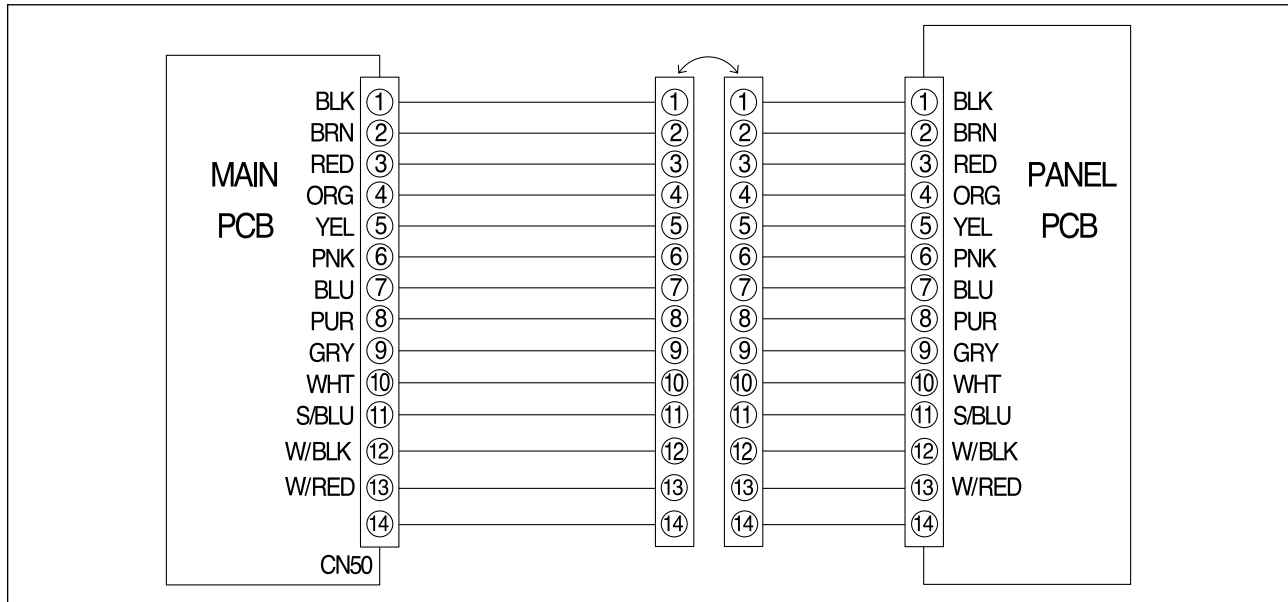

Ref. 2) How to check relay failure

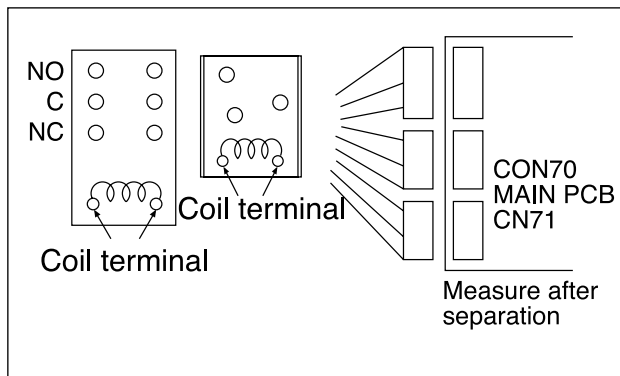

* Disconnect the wire connector from the main PCB CN70, 71 and measure the following items.


1. Measure the coil bisection of the relay and check whether it works.
2. Measure the apex bisection for open circuit.

| Category | Voltage of coil terminal | Judge |
|--------------------------|--------------------------|-------------------------|
| 3-contact terminal Relay | DC 12V(Operation) | C-NO:SHORT C-NC:OPEN |
| | DC 0V(Standstill) | C-NO:OPEN C-NO:SHORT |
| 2-contact terminal Relay | DC 12V(Operation) | SHORT |
| | DC 0V(Standstill) | OPEN |

Note) C → Common, NO → Normal open, NC → Normal close

3. When it operates as above, it is normal and when it does not operate, repair the corresponding relay.

Ref. 3) Check a load

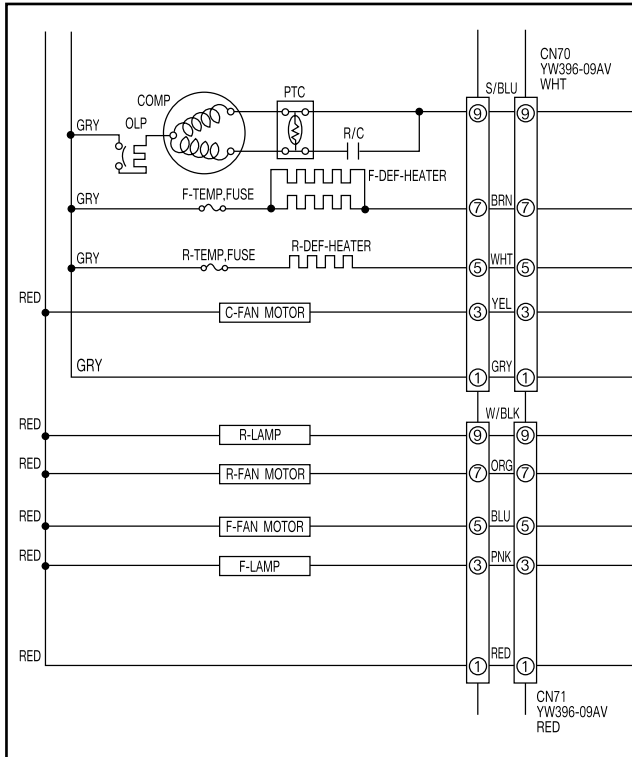


* Unplug the power cord and disconnect the connector from the main PCB CN70, 71 and measure the following:

1. Measure resistance between the terminals and check for malfunctioning of a load and wire connection.

| Subordinate | Measurement terminal | Evaluation of measurement result |
|----------------------|----------------------|----------------------------------|
| R Defrost heater | CN70 ⑤ - ① | |
| F Defrost heater | CN70 ⑦ - ① | |
| Comp | CN70 ⑨ - ① | |
| Comp-circulation fan | CN71 ⑦ - ① | |
| R-Circulation fan | CN71 ⑤ - ① | |
| F-Circulation fan | CN70 ③ - ① | |
| R-Lamp | CN71 ⑨ - ① | |
| F-Lamp | CN71 ③ - ① | |

Ref. 4) Check sensors

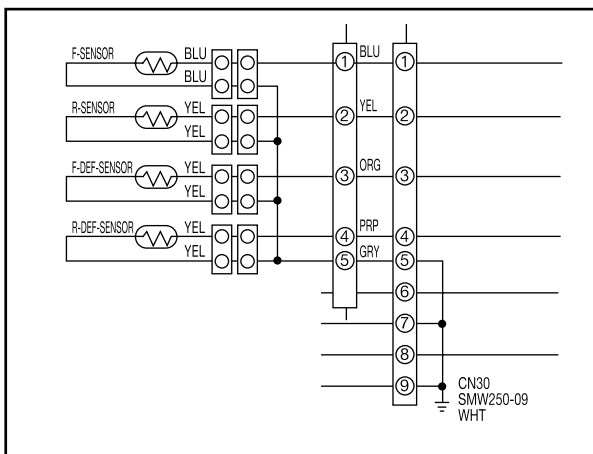


* Disconnect the connector from the main PCB CN30.

* Resistance will be lowered while the temperature rises due to a NTC type sensor.

1. R sensor measures resistance of CN30 between ② ~ ⑤.
2. Freezer sensor measures resistance of CN30 between ① ~ ⑤.
3. R-defrost sensor measures resistance of CN30 between ④ ~ ⑤.
4. F-defrost sensor measures resistance CN30 between ③ ~ ⑤.
5. The measured value above is compared to the sensor specification and the temperature table in specification found in the manual.

Ref. 5) Check Door S/W

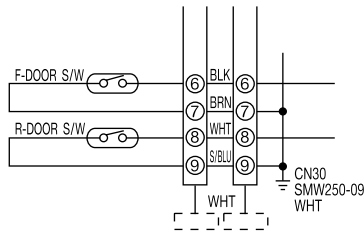


(Refrigerator Bulb)

1. Open the door and check if the freezer lamp turns on.
2. Press the Door S/W and check if the freezer lamp turns off.
3. Close the freezer door and repeat 1 and 2 for refrigerator door.
4. If there is a problem, check lightbulb and door S/W.
5. Check wire connection.

(Micom signal)

1. Check if CN30 ⑥ and ⑧ is 5V DC after closing the F-R doors.
2. Check if CN30 ⑥ is 0V DC when opening F door.
Check if CN30 ⑧ is 0V DC when opening R door.
3. If there is problem, check door S/W and wire connection.


Ref. 6) Forced Operation and Forced Defrosting

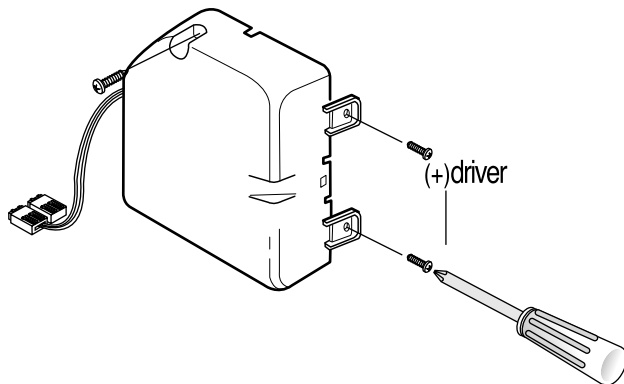

(Forced running)

* This function is used to turn on the comp and fan immediately regardless of the temperature of freezer using the test button on the main PCB.

1. Press the TEST button on the PCB after removing the main PCB cover in the machine compartment.
2. Buzzer will sound to indicate the forced running.

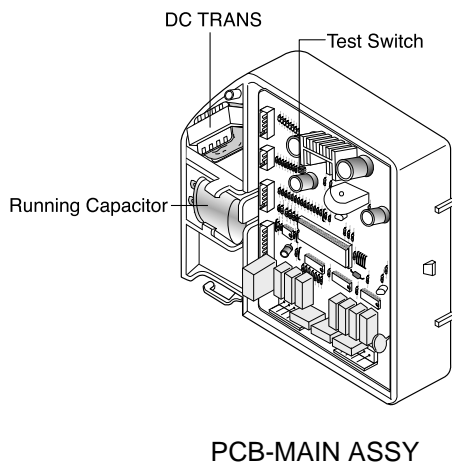

(Forced defrosting)

* This function is used to turn on the defrosting regardless of defrost time.

1. Press the button during forced running. Then, R-defrosting is performed.
2. If the button is press during R-defrosting, F-defrosting is also performed at the same time.
3. If the button is pressed during R-F defrosting, test mode is released.

Ref. 7) Table of temperature sensor according to resistance and voltage conversion.

* Voltage conversion table depends on H/W structure of MICOM port input voltage.


Sensor Short : Micom 0V.

Sensor Open : Micom 5V.

※ Sensor partial pressure resistance 10KΩ



| Temp.(°F) | Resistance(Ω) | Voltage(V) | Temp.(°F) | Resistance(Ω) | Voltage(V) | Temp.(°F) | Resistance(Ω) | Voltage(V) |
|-----------|---------------|------------|-----------|---------------|------------|-----------|---------------|------------|
| -43.6 | 98870 | 4.541 | 12.2 | 21410 | 3.408 | 68.0 | 6013 | 1.878 |
| -41.8 | 93700 | 4.518 | 14.0 | 20480 | 3.360 | 69.8 | 5792 | 1.834 |
| -40.0 | 88850 | 4.494 | 15.8 | 19580 | 3.310 | 71.6 | 5581 | 1.791 |
| -38.2 | 84150 | 4.469 | 17.6 | 18730 | 3.260 | 73.4 | 5379 | 1.749 |
| -36.4 | 79800 | 4.443 | 19.4 | 17920 | 3.209 | 75.2 | 5185 | 1.707 |
| -34.6 | 75670 | 4.416 | 21.2 | 17160 | 3.159 | 77.0 | 5000 | 1.667 |
| -32.8 | 71800 | 4.389 | 23.0 | 16430 | 3.108 | 78.8 | 4821 | 1.626 |
| -31.0 | 68150 | 4.360 | 24.8 | 15740 | 3.057 | 80.6 | 4650 | 1.587 |
| -29.2 | 64710 | 4.331 | 26.6 | 15080 | 3.006 | 82.4 | 4487 | 1.549 |
| -27.4 | 61480 | 4.301 | 28.4 | 14450 | 2.955 | 84.2 | 4329 | 1.511 |
| -25.6 | 58430 | 4.269 | 30.2 | 13860 | 2.904 | 86.0 | 4179 | 1.474 |
| -23.8 | 55550 | 4.237 | 32.0 | 13290 | 2.853 | 87.8 | 4033 | 1.437 |
| -22.0 | 52840 | 4.204 | 33.8 | 12740 | 2.801 | 89.6 | 3894 | 1.401 |
| -20.2 | 50230 | 4.170 | 35.6 | 12220 | 2.750 | 91.4 | 3760 | 1.366 |
| -18.4 | 47770 | 4.134 | 37.4 | 11720 | 2.698 | 93.2 | 3631 | 1.332 |
| -16.6 | 45450 | 4.098 | 39.2 | 11250 | 2.647 | 95.0 | 3508 | 1.298 |
| -14.8 | 43260 | 4.061 | 41.0 | 10800 | 2.596 | 96.8 | 3390 | 1.266 |
| -13.0 | 41190 | 4.023 | 42.8 | 10370 | 2.545 | 98.6 | 3276 | 1.234 |
| -11.2 | 39240 | 3.985 | 44.6 | 9959 | 2.495 | 100.4 | 3167 | 1.203 |
| -9.4 | 37390 | 3.945 | 46.4 | 9569 | 2.445 | 102.2 | 3062 | 1.172 |
| -7.6 | 35650 | 3.905 | 48.2 | 9195 | 2.395 | 104.0 | 2962 | 1.143 |
| -5.8 | 33990 | 3.863 | 50.0 | 8839 | 2.3462 | 105.8 | 2864 | 1.113 |
| -4.0 | 32430 | 3.822 | 51.8 | 8494 | .296 | 107.6 | 2770 | 1.085 |
| -2.2 | 30920 | 3.778 | 53.6 | 8166 | 2.248 | 109.4 | 2680 | 1.057 |
| -0.4 | 29500 | 3.734 | 55.4 | 7852 | 2.199 | 111.2 | 2593 | 1.030 |
| 1.4 | 28140 | 3.689 | 57.2 | 7552 | 2.151 | 113.0 | 2510 | 1.003 |
| 3.2 | 26870 | 3.644 | 59.0 | 7266 | 2.104 | 114.8 | 2429 | 0.977 |
| 5.0 | 25650 | 3.597 | 60.8 | 6992 | 2.057 | 116.6 | 2352 | 0.952 |
| 6.8 | 24510 | 3.551 | 62.6 | 6731 | 2.012 | 118.4 | 2278 | 0.928 |
| 8.6 | 23420 | 3.504 | 64.4 | 6481 | 1.966 | 120.2 | 2206 | 0.904 |
| 10.4 | 22390 | 3.456 | 66.2 | 6242 | 1.922 | | | |

11. PCB Circuit Diagram

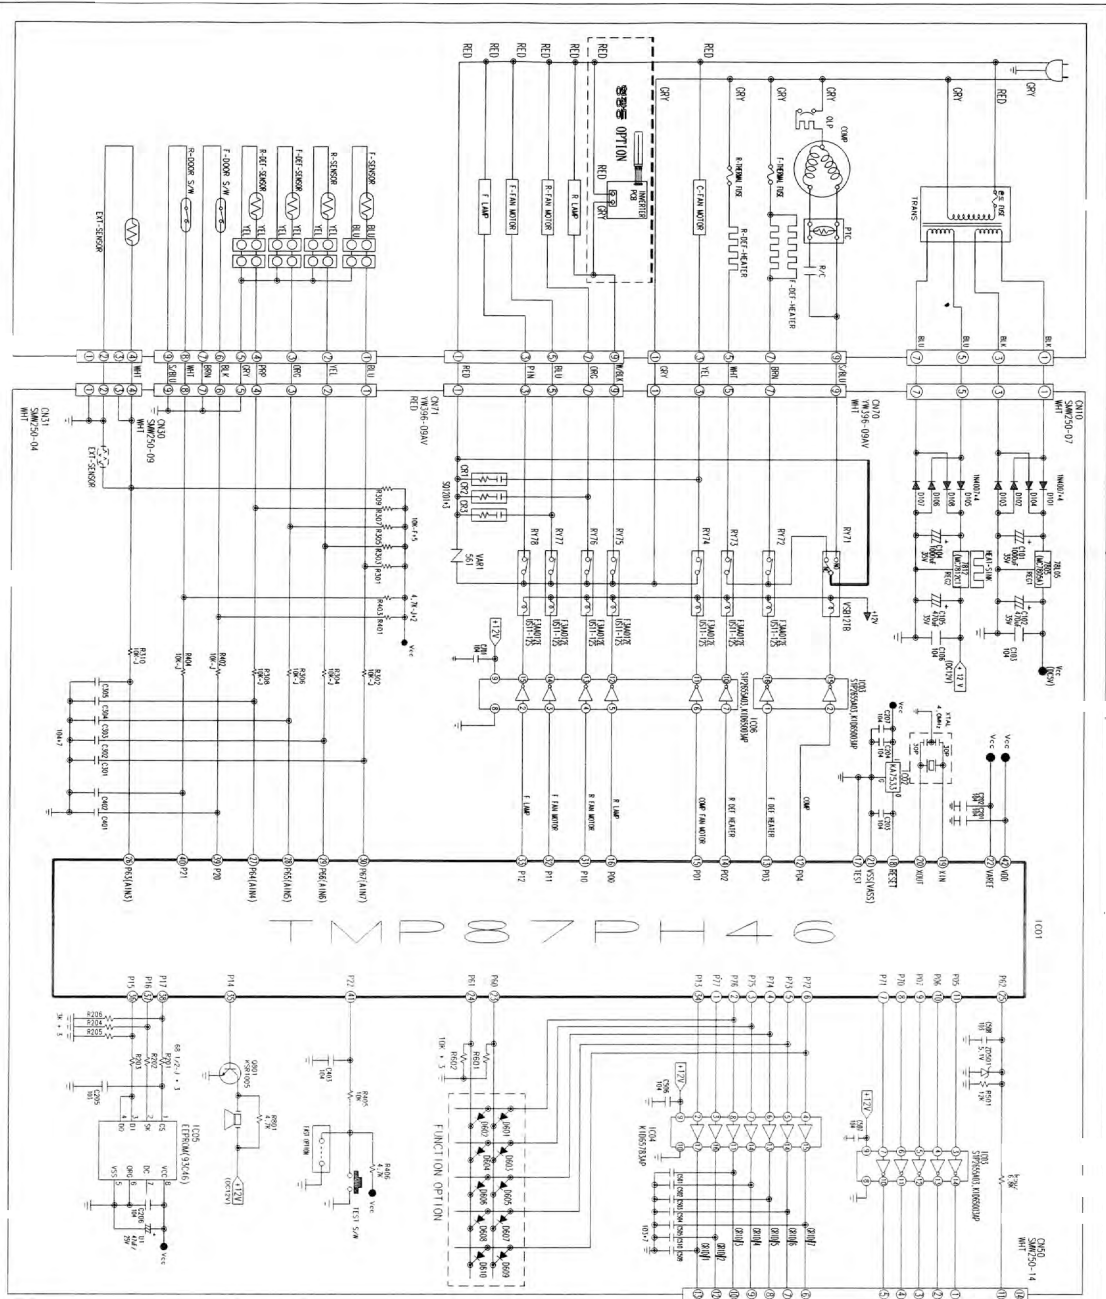

RESISTOR LIST

| REF | VALUE | PACKAGE | QTY |
|-----|-------|---------|-----|
| R1 | 10K | 0603 | 1 |
| R2 | 10K | 0603 | 1 |
| R3 | 10K | 0603 | 1 |
| R4 | 10K | 0603 | 1 |
| R5 | 10K | 0603 | 1 |
| R6 | 10K | 0603 | 1 |
| R7 | 10K | 0603 | 1 |
| R8 | 10K | 0603 | 1 |
| R9 | 10K | 0603 | 1 |
| R10 | 10K | 0603 | 1 |
| R11 | 10K | 0603 | 1 |
| R12 | 10K | 0603 | 1 |
| R13 | 10K | 0603 | 1 |
| R14 | 10K | 0603 | 1 |
| R15 | 10K | 0603 | 1 |
| R16 | 10K | 0603 | 1 |
| R17 | 10K | 0603 | 1 |
| R18 | 10K | 0603 | 1 |
| R19 | 10K | 0603 | 1 |
| R20 | 10K | 0603 | 1 |
| R21 | 10K | 0603 | 1 |
| R22 | 10K | 0603 | 1 |
| R23 | 10K | 0603 | 1 |
| R24 | 10K | 0603 | 1 |

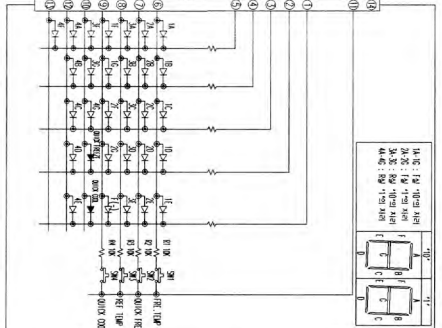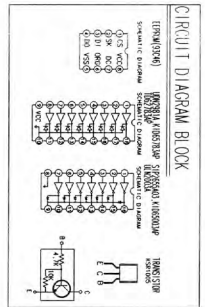



**272, Oseon-Dong, Kwangsan-Gu,
Kwangju-City, Korea, 506-253
TEL : 82-62-950-6193, 6896
FAX : 82-62-950-6829**

**- This Service Manual is a property of Samsung Electronics Co., Ltd.
Any unauthorized use of Manual can be punished under applicable
International and/or domestic law. -**